

How to order GSPL 15kW-22.5kW - Power Supply Identification / Accessories

G	SPL	20	-	750	-	-	-
Series Name	Output	Output	Interface Options		AC Input Options	Accessories Options	
Front Panel Type	Voltage	Current	P/N		3P208 (Three Phase 170~265VAC)	M - Printed *User Manual	
Empty: standard	(0~20V)	(0~1125A)			3P480 (Three Phase 342~528VAC)	* User Manual & GUI are available on the website	
B: Blank Front Panel (ATE version)							

Interface Options (Factory installed)

LAN (1.5 compliant with Multi-Drop capability)- built-in	-
USB 2.0 compliant with Multi-Drop capability - built-in	-
RS-232/RS-485 - built-in	-
Isolated Analog Program/Monitor Interface (5V/10V Pgm/Mon with 600V isolation) - built-in	-
Isolated Analog Programming (4-20mA)	IS420
IEEE (488.2 & SCPI compliant with Multi-Drop capability installed)	IEEE
Modbus-TCP	MDBS
EtherCAT	ECAT

Models GSPL 15kW

Model	Voltage (VDC)	Current (A)	Power (kW)	Model	Voltage (VDC)	Current (A)	Power (kW)
GSPL20-750	0~20V	0~750	15	GSPL150-100	0~150V	0~100	15
GSPL30-500	0~30V	0~500	15	GSPL200-75	0~200V	0~75	15
GSPL40-376	0~40V	0~376	15	GSPL300-50	0~300V	0~50	15
GSPL60-250	0~60V	0~250	15	GSPL600-25	0~600V	0~25	15
GSPL80-188	0~80V	0~188	15	GSPL1000-15	0~1000V	0~15	15
GSPL100-150	0~100V	0~150	15	GSPL1500-10	0~1500V	0~10	15

Models GSPL22.5kW

Model	Voltage (VDC)	Current (A)	Power (kW)	Model	Voltage (VDC)	Current (A)	Power (kW)
GSPL20-1125	0~20V	0~1125	22.5	GSPL150-150	0~150V	0~150	22.5
GSPL30-750	0~30V	0~750	22.5	GSPL200-112.5	0~200V	0~112.5	22.5
GSPL40-564	0~40V	0~564	22.56	GSPL300-75	0~300V	0~75	22.5
GSPL60-375	0~60V	0~375	22.5	GSPL600-37.5	0~600V	0~37.5	22.5
GSPL80-282	0~80V	0~282	22.56	GSPL1000-22.5	0~1000V	0~22.5	22.5
GSPL100-225	0~100V	0~225	22.5	GSPL1500-15	0~1500V	0~15	22.5

Accessories

Accessories will be sent separately from the Power Supply packing, according to order.

1. Serial Communication cable

RS-232/RS-485 cable is used to connect the power supply to the Host PC.

Mode	RS-485	RS-232
PC Connector	DB-9F	DB-9F
Communication Cable	Shielded L=2m	Shielded L=2m
Power Supply Connector	RJ-45	RJ-45
P/N	GEN/485-9	GEN/232-9

2. Bus Paralleling cable (Included with the power supply)

Connectors	Cables	P/N
2013595-1 (TYCO)	Shielded L=11cm	G/P

3. Remote Sense Connector

Connectors	Cables	P/N
Phoenix Contact.	Wire AWG - refer to User Manual	GIC 2,5 HCV/ 3-ST-7,62

4. User Manual

Printed User Manual	G/M