



PQ55A

Power Analyzer

User Manual



PQ55A

Power Analyzer

Limited Warranty and Limitation of Liability

Your Amprobe product will be free from defects in material and workmanship for 1 year from the date of purchase. This warranty does not cover fuses, disposable batteries or damage from accident, neglect, misuse, alteration, contamination, or abnormal conditions of operation or handling. Resellers are not authorized to extend any other warranty on Amprobe's behalf. To obtain service during the warranty period, return the product with proof of purchase to an authorized Amprobe Test Tools Service Center or to an Amprobe dealer or distributor. See Repair Section for details. THIS WARRANTY IS YOUR ONLY REMEDY. ALL OTHER WARRANTIES - WHETHER EXPRESS, IMPLIED OR STATUTORY - INCLUDING IMPLIED WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE OR MERCHANTABILITY, ARE HEREBY DISCLAIMED. MANUFACTURER SHALL NOT BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LOSSES, ARISING FROM ANY CAUSE OR THEORY. Since some states or countries do not allow the exclusion or limitation of an implied warranty or of incidental or consequential damages, this limitation of liability may not apply to you.

Repair

All test tools returned for warranty or non-warranty repair or for calibration should be accompanied by the following: your name, company's name, address, telephone number, and proof of purchase. Additionally, please include a brief description of the problem or the service requested and include the test leads with the meter. Non-warranty repair or replacement charges should be remitted in the form of a check, a money order, credit card with expiration date, or a purchase order made payable to Amprobe® Test Tools.

In-Warranty Repairs and Replacement – All Countries

Please read the warranty statement and check your battery before requesting repair. During the warranty period any defective test tool can be returned to your Amprobe® Test Tools distributor for an exchange for the same or like product. Please check the "Where to Buy" section on www.amprobe.com for a list of distributors near you. Additionally, in the United States and Canada In-Warranty repair and replacement units can also be sent to a Amprobe® Test Tools Service Center (see address below).

Non-Warranty Repairs and Replacement – US and Canada

Non-warranty repairs in the United States and Canada should be sent to a Amprobe® Test Tools Service Center. Call Amprobe® Test Tools or inquire at your point of purchase for current repair and replacement rates.

In USA

Amprobe Test Tools
Everett, WA 98203
Tel: 877-AMPROBE (267-7623)

In Canada

Amprobe Test Tools
Mississauga, ON L4Z 1X9
Tel: 905-890-7600

Non-Warranty Repairs and Replacement – Europe

European non-warranty units can be replaced by your Amprobe® Test Tools distributor for a nominal charge. Please check the "Where to Buy" section on www.amprobe.com for a list of distributors near you.

European Correspondence Address*








Amprobe® Test Tools Europe
P.O. Box 1186
5602 BD Eindhoven
The Netherlands


*(Correspondence only – no repair or replacement available from this address. European customers please contact your distributor.)

Contents


Introduction/ Contents	4
Safety Information.....	5
Appropriate Usage	5
Transport and Storage.....	5
Power Supply.....	6
Operation Elements and Connections.....	6
Casing bottom	8
Display	8
General information	11
Carrying out Measurements.....	11
Connection Power Supply.....	11
Single-phase Power Measurement – Type of connection 1P2W	12
Two-phase Power Measurement – Type of Connection 1P3W.....	14
Three-phase Power Measurement, Aron connection – type of connection 3P3W2M	16
Three-phase Power Measurement, Star connection – type of connection 3P4W.....	18
Single-phase Current Measurement.....	20
Data Memory – Saving individual measurements.....	21
Recording with the Data Logger.....	21
Delete Measurement Data within the Data Logger	21
Basic Settings.....	22
Performing a Recording.....	22
Determining the Rotary Field.....	23
Curve Shape and Harmonic Wave Measurement.....	24
Connection to the PC Interface.....	24
Windows-Software.....	24
System Requirements	24
Installation	25
Program Functions.....	25
Online Register: Online Measurement.....	26
Ordinal number of the harmonics:	29
Harmonics Register: Harmonics Measurement.....	30
Data logger Register : Data Logger – Analysis of the Data	32
Saved Data Register: Analysis of Data saved on the PC	36
Maintenance.....	37
Cleaning	37
Calibration Interval.....	37
Replacement of batteries.....	37
Round Cells	38
Technical Data	39

References marked on instrument or in users manual

	Warning of a potential danger, comply with users manual.		Equipment protected throughout by double insulation or reinforced insulation IEC 61140.
	Caution! Dangerous voltage. Danger of electrical shock.		Conformity symbol, the instrument complies with the valid directives. It complies with the EMC Directive (89/336/EEC) and the Low Voltage Directive (73/23/EEC) with their valid standards.
	Conforms to Relevant Australian Standards		
	Reference. Please use utmost attention.		Symbol for the marking of electrical and electronic equipment (WEEE Directive 2002/96/EC).

 The users manual contains information and references, necessary for safe operation and maintenance of the instrument.

Prior to using the instrument (commissioning / assembly) the user is kindly requested to thoroughly read the users manual and comply with it in all sections.

 Failure to read the users manual or to comply with the warnings and references contained herein can result in serious bodily injury or instrument damage.

Introduction/ Contents

The Amprobe PQ55A Power Analyzer is a portable measurement instrument for power measurements within public mains supplies. The power measuring device is characterized by the following features:

Characteristics

- Portable 3-phase power and energy measurement instrument
- Comprehensive real time monitoring, recording and analysis of three-phase systems

Measurement functions:

Voltage (rms)

Current (rms)

Power (active, apparent and idle power)

Power factor, phase angle

- Multi-functional measurement value display
- Internal data logger of 512 kb for long-term monitoring
- Internal data memory for max. 99 individual measurements
- Power supply either via batteries or via external mains adapter
- Data transfer via optically isolated RS 232 interface
- Windows software for data analysis and instrument control.

Contents

- 1 piece Power Analyzer
- 4 pieces current clamps 1000 A
- 4 pieces alligator clips, isolated
- 4 pieces safety test leads
- 8 pieces 1.5 V batteries LR6
- 1 piece mains adapter
- 1 piece RS-232 cable
- 1 piece large carrying bag
- 1 piece operation instructions
- 1 piece PC software (for Windows ME/2000/XP),

⚠ ⚠ Safety Information

- The respective accident prevention regulations established by the professional associations for electrical systems and equipment must be strictly met at all times.
- The instrument may only be connected to input voltage as indicated on the back decal.
- In order to avoid electrical shock, the valid safety and national regulations regarding excessive contact voltages must receive utmost attention, when working with voltages exceeding 120V (60V) DC or 50V (25V)rms AC. The values in brackets are valid for limited ranges (as for example medicine and agriculture).
- Measurements in dangerous proximity of electrical installations are only to be executed when instructed by a responsible electrical specialist, and never alone.
- If the operator's safety is no longer ensured, the instrument is to be put out of service and protected against use. The safety is no longer insured, if the instrument:
 - shows obvious damage
 - does not carry out the desired measurements
 - has been stored for too long under unfavourable conditions
 - has been subjected to mechanical stress during transport.
- The instrument may only be used within the operating ranges as specified in the Specification section.
- Avoid any heating up of the instrument by direct sunlight to ensure proper functioning and long instrument life.
- Never try to disassemble battery cells !The battery contains highly alkaline electrolyte. Danger of causticization. If electrolyte gets in contact with skin or clothing, rinse immediately with water. If electrolyte gets in contact with the eyes, immediately flush by using pure water and consult a doctor.
- Never try to make contact between both battery cell poles, for example by using a wire connection. The resulting short-circuit current is very high and causes extreme heat. Danger of fire and explosion.
- Never throw battery cells into a fire as this could cause an explosion.
- Never expose batteries or accumulators to humidity.
- When replacing or changing the battery, make certain of correct polarity.
- Only use batteries as described in the specifications

⚠ Appropriate Usage

- The instrument may only be used under those conditions and for those purposes for which it was conceived. For this reason, in particular the safety references, the specifications including environmental conditions and the usage in dry environments must be followed.
- When modifying or changing the instrument, the operational safety is no longer ensured.

⚠ Transport and Storage

- Please keep the original packaging for later transport, e.g. for calibration. Any transport damage due to faulty packaging will be excluded from warranty claims
- In order to avoid instrument damage, it is advised to remove batteries when not using the instrument over a certain time period. However, should the instrument be contaminated by leaking battery cells, you are kindly requested to return it to the factory for cleaning and inspection.
- Instruments must be stored in dry and closed areas. In the case of an instrument being transported in extreme temperatures, a recovery time of minimum 2 hours is required prior to instrument operation.


Power Supply

The power to the unit is realized by means of a mains adapter or by six 1.5 volt batteries.

- ⚠ The mains adapter may only be connected to input voltage as indicated on the name plate.
- ⚠ Never use the batteries and the mains adapter simultaneously as the batteries will warm up and can explode.
- ⚠ Only the mains adapter shipped with the PQ55A may be connected and used.

Operation Elements and Connections

Side view – connecting fields

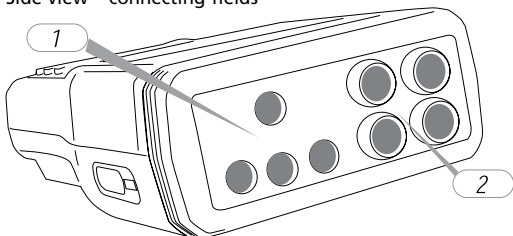

1.	Connections for voltage measurement (U1, U2, U3, N) <ul style="list-style-type: none">• The 3 input ports are not galvanically isolated, they have the common reference point "N" (neutral).• Only safety test leads with CAT III 600V ratings are to be used.
2.	Connections for clamp adapter (I1, I2, I3, I4=N, neutral) <ul style="list-style-type: none">• The correct assignment of connections regarding voltage and current must imperatively be observed.

Front view – operation elements





















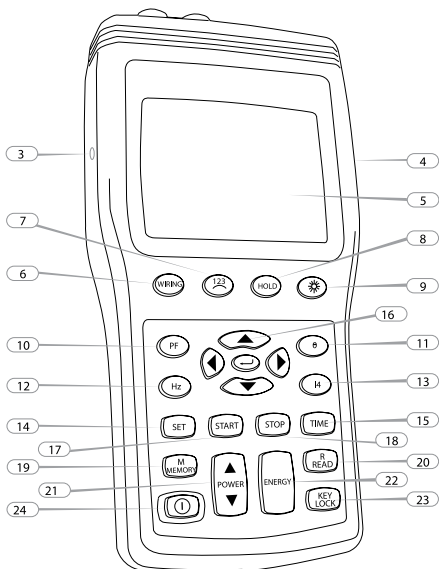







Figure: Front view – operation elements

 All keys must be pressed until an acoustic signal is audible.


3.		Lateral connection for electric power supply.  The instrument may only be connected to the mains adapter shipped with the PQ55A or a mains adapter complying with the data defined within the specification section.
4.		Lateral optically isolated connection for the RS-232 interface
5.		LCD (liquid crystal display)
6.		Key for type of connection. Function key to select the type of connection. Selection can be made among the following type of connections (please also refer to chapter 5.3.1 Connection to the electric power supply system): 1P2W:single phase power measurement 1P3W:two-phase power measurement 3P3W2M:three-phase power measurement, Aron connection 3P4W:three-phase power measurement, star connection
7.		Key for rotary field determination. The rotary field is determined when selecting the type of connection "3P4W" by pressing this key and is indicated on the display as follows:  : clockwise rotary field  : counterclockwise rotary field
8.		Key for Data Hold, to hold the display value. If the HOLD function is activated, the symbol [HOLD] is displayed on the screen.
9.		Key for display illumination (backlight) The backlight switches off automatically after approx. 30 seconds.
10.		Power factor indication. Key to switch to the power factor indication. If the display selection is switched on, the symbol "PF" is indicated.
11.		Phase angle indication. Key to commute to the phase angle indication. If the display selection is switched on, the symbol " θ " is indicated.
12.		Mains frequency indication. Key to commute to the mains frequency display. If the display selection is switched on, the symbol "Hz" is indicated.
13.		Indication of current measurement via clamp 4. Key to switch to indicate the current measurement via input "I4". If the display selection is switched on, the symbol "I4 A" is indicated.
14.		Time setting. Key used to activate the time setting. Simultaneous pressing of keys "SET" and "TIME" activates the date and time setting as well as the sampling rate.
15.		Key used to display the date and time. Reference: This display is automatically switched off after approx. 10 seconds.
16.		Navigation keys. Keys used to set the time and to call the memorised values.
16a.		ENTER key to confirm any setting
17.		Data logger - Key to start the recording of measurement values  If the recording function is activated, the symbol [M] blinking with the preset measurement rate. Below, the number of the current series of measurements is displayed.
18.		Dater logger - Key to terminate the recording of measurement values.
19.		Measurement data memory - Key to save individual measurement data. When saving a measurement, the symbol [M] is briefly displayed on the screen with the indication of the storage place number below. It is possible to save up to 99 measurement values.

20		<p>Measurement data memory - Key to save individual measurement data.</p> <p>After selecting the display of measurement data, the symbol [R] is displayed. The navigation keys 5 and 6 are used to select and display the measurement values, starting with the first storage place. The memory mode can be left again when pressing the key.</p>
21		<p>Power display. Toggle switch to change the display of power data. The selected display is characterised on the screen as follows: t = total value 1 = phase 1 2 = phase 2 3 = phase 3</p>
22		<p>Energy measurement Key to change to the energy data display</p>
23		<p>Keyboard lock - The activated keyboard lock can be recognised by the "LOCK" symbol. It is not possible to lock keys [Ⓜ] and [Ⓢ]</p>
24		<p>Key to switch on and off. When switching the instrument On/Off and Backlight, the auto-power-off function is automatically activated, i.e. 30 minutes after the last keystroke, the instrument switches off automatically. To perform longterm measurements for example, the auto-power-off function must be deactivated as follows: 1) Switch off the instrument Press the "HOLD" key and keep it pressed while switching on the instrument. Keep the "HOLD" key pressed until the total display appears. If the HOLD function has also be activated, press the "HOLD" key again. auto-power-off function has been deactivated, the symbol ∅ is no longer displayed on the screen ∅.</p>

Casing bottom

The instrument stand and the battery case are located at the instrument bottom.

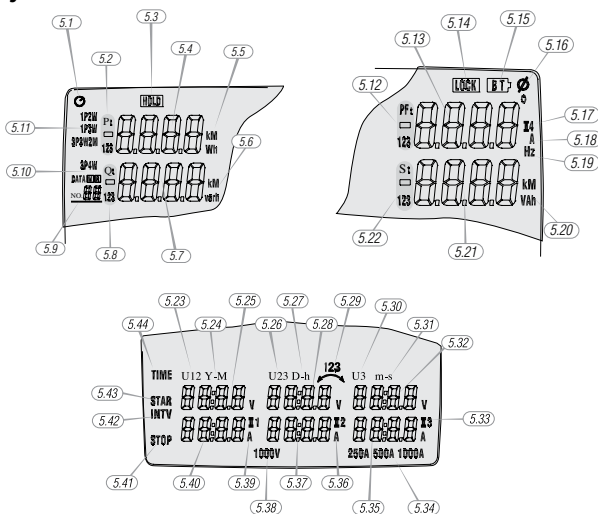

Display



The multi-function display contains the currently measured primary quantities. The display format and the units (V, kV, A, kA, W, kW, MW etc...) are automatically displayed in compliance with the selected values.

The following symbols and values are displayed:

5.1	0 Auto-power-off function is activated
5.2	P1 Display of the active power on phase 1 P2 Display of the active power on phase 2 P3 Display of the active power on phase 3 Pt Display of the total active power
5.3	HOLD] Activated HOLD function
5.4	Display value for active power
5.5	Unit of the active power: kW or Unit of the energy: kWh or MWh
5.6	Unit of the idle power: kvar or Unit of the energy: kvarh or Mvarh
5.7	Display value for idle power
5.8	Q1 display of the idle power on phase 1 Q2 display of the idle power on phase 2 Q3 display of the idle power on phase 3 Qt Display of the total idle power ☞ A negative sign "-" indicates a leading current.
5.9	DATA No.xx Display of the storage place. Manual data memory: display of the last saved manual measurement value (01 through 99)). Data logger: display of the last saved series of measurements (01 through 10) ☞ Maximum 10 series of measurements or 21.000 measurement values can be saved. • If "FF" is displayed, the data memory is full. • If "00" is displayed, the data memory is empty.
5.10	M] display for active saving process ☞ The symbol [M] is briefly displayed for manual measurement data saving. • The symbol is permanently displayed for active data logger recording and is briefly hidden during automatic saving. [R] display of individually saved measurement values DATA [R] No. xx display of the storage place for the measurement value
5.11	1P2W single-phase power measurement 1P3W two-phase power measurement P3W2M three-phase power measurement, Aron connection 3P4W three-phase power measurement, start connection
5.12	PF1 –power factor display on phase 1 PF2 power factor display on phase 2 PF3 power factor display on phase 3 PFt –display of the total power factor ☞ A negative sign "-" indicates a leading current.
5.13	Display value of additional display
5.14	[LOCK] keyboard lock is active
5.15	[BT] display for used batteries
5.16	display of phase angle ° unit of phase angle
5.17	display of the current measured via input "I4"
5.18	unit of the current
5.19	unit of the frequency
5.20	unit of the apparent power: kVA or unit of the energy: kWh or MVAh
5.21	display value of apparent power
5.22	S1 display of apparent power on phase 1 S2 display of apparent power on phase 2 S3 display of apparent power on phase 3 St display of the total apparent power
5.23	U1 or U12 display of voltage on phase 1 (U1) or the conductor voltage U12
5.24	Y-M display for year (Y) and month (M)

5.25	display value for voltage or date
5.26	U2 or U23 display of voltage on phase 2 (U2) or the conductor voltage U23
5.27	D-h display for day (D) and hour (h)
5.28	display value for voltage or date/ time
5.29	<-123 or 123-> display of the rotary field
5.30	U3 display for voltage on phase 3
5.31	m-s display for minute (m) and second (s)
5.32	display value for voltage or time
5.33	units for phase 3
5.34	250 A, 500 A, 1000 A display of current measurement range  Change-over over is carried out automatically (autorange function).
5.35	Display value for current or time
5.36	units for phase 2
5.37	display value for current or date/ time
5.38	1000 V display of voltage measurement range
5.39	units for phase 1
5.40	display value for current or date
5.41	STOP display for final time of the energy calculation
5.42	INTV display for preset sampling rate  The following settings are possible:5 s, 30 s, 1 min, 2 min.
5.43	STAR display of starting time for energy calculation
5.44	TIME display for date and time

Preparation for Operation

Before putting the instrument into operation, the batteries must be installed. The steps described

in point 2.0 regarding the handling of batteries must imperatively be observed.


Installing the Batteries

- 1) Unscrew both screws of the battery compartment cover on the casing rear.
- 2) Remove the battery compartment cover.
- 3) Insert the batteries supplied observing correct polarity

The correct battery position is shown on the inside of the battery compartment.

- 4) Replace the battery compartment cover and retighten the screws.

Backside

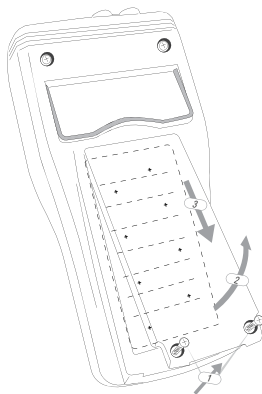

General information

- ⚠ The safety references must be followed.
- 🔧 The respective accident prevention regulations established by the professional associations for electrical systems and equipment must be strictly met at all times.

Carrying out Measurements


Connection Power Supply

- ⚠ The respective accident prevention regulations established by the professional associations for electrical systems and equipment must be strictly met at all times.
- ⚠ To avoid electric shock, safety measures must be observed when working with voltages higher than 120 V (60 V) DC or 50 V (25 V) RMS AC. These are the values of threshold contact voltages given by DIN VDE. The values in brackets apply to medical and agricultural applications.
- ⚠ Measurements in dangerous proximity of electrical installations are only to be executed when instructed by a responsible electrical specialist, and never alone.
- ⚠ Before connecting the test leads, the measurement instrument must be set to the correct type of connection.
- ⚠ The correct connection assignment for voltage and current must imperatively be observed.
- 🔧 Phase assignment: The measurement inputs may not be exchanged. I.e. if, for example, the voltage clips for the first phase are connected to voltage input U1, the current clamp pertaining to this phase must be connected to current input I1. Observe the markings of the clamp adapters and the connection field.
- ⚠ Before connecting the test leads, determine the neutral conductor for N input using an appropriate measurement instrument
- ⚠ The test leads and test probes may only be touched at the handles provided for this purpose. Any direct contact with the test probes must imperatively be avoided.
- ⚠ The measurement inputs U1, U2, and U3 are galvanically connected. Input N is the common reference point. Measurement inputs which are not required may not be connected!
- ⚠ When using clamp adapters, special care has to be applied that they are connected to a measurement instrument before they surround a live conductor. Open clamp adapter outputs can be dangerous for the user and can lead to the destruction of the clamp adapter, caused by high induction voltages.
- 🔧 When connecting clamp adapters, special care has to be applied that the arrow marked on the current clamps (direction of current flow) must point from the electric power supply to the load. I.e. the printed arrow must point to the electric power supply.

🔧 Shaft direction (X1)


If a clamp is connected in the opposite direction, the power measured at this phase would appear to be negative.

🔧 As the voltage input U1 represents the main signal for the Power Analyzer, this input must always be connected, i.e. even for measurements of U2, U3, I1, I2, and I3. If this input is not connected or if no voltage is present, the measurement instrument will not record any measurement values.

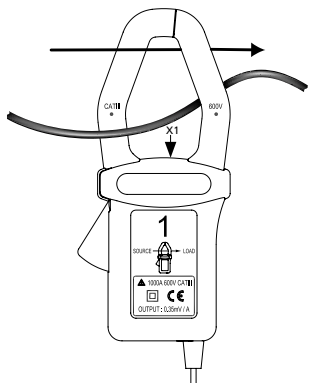

Single-phase Power Measurement – Type of connection 1P2W


1) Switch on the instrument.

- 2)  Select the type of connection 1P2W using the “Wiring” function key (6). After selection, the following display is indicated with the symbol 1P2W (5.11):



Display type of connection 1P2W

3) The measurement inputs are connected as illustrated in the following drawing:

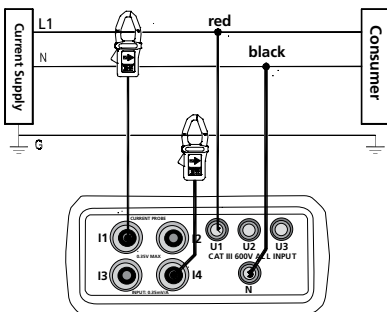



Type of connection 1P2W

L1: phase

N: neutral conductor


G: protective earth

 Shaft direction (X1) (see also page 12).

 Current flow direction: The printed arrow on the clamp adapter must point to the electric power supply.


Connect the test leads to the measurement instrument as follows:

- 1) Connect black test lead to socket N.
- 2) Connect red test lead to socket U1.
- 3) Connect clamp adapter 1 to socket I1.
- 4) If required, connect clamp adapter 4 to socket I4.







 This connection can be used to monitor the protective earth current.

Now, connect the tests leads and the clamp adapter to the electric power supply to be tested using the alligator clips.

- 1) Connect black test lead to neutral conductor N.
- 2) Connect red test lead to phase L1.
- 3) Open the clamp adapter 1 using the clamp opening lever and surround the live phase L1.

 Make sure that the clamp completely surrounds the conductor and that there is no air gap.

4) If required, connect the clamp adapter 4 in the same way to the protective earth. The current measurement values are indicated on the display. The following additional measurement values can be selected subsequently and indicated on the additional display (5.13):

	To display the mains frequency, press the "Hz" key (12).
	To display the phase angle, press the θ key (11).
	To display the power factor, press the "PF" key (10).
	If required, press the "I4" key (13) to display the protective earth current
	Individual measurements may be saved using the "M/MEMORY" key (19)
	To measure the energy values, press the "ENERGY" key (22).

☞ When this measurement type is selected, the automatic-power-off function of the instrument is deactivated.





The following values are displayed.



Display Measurement type energy


In the lower part, the starting time of the measurement is displayed in the "STAR" line (5.43). Below, the current date and time are displayed during the measurement. I.e. the energy values are permanently calculated during running display.

In the upper part of the display, the total values for the active power (5.4), the idle power (5.7), the apparent power (5.21), and the power factor (5.13) are displayed (to be recognised by the suffix "t") .

	The measurement is terminated when pressing the  key (18). The [HOLD] symbol is displayed on the screen and the final calculation time appears in the "STOP" line (5.41).
	The instrument returns to normal measurement when pressing the " 

☞ The measurement values for the energy measurement cannot be saved.


Two-phase Power Measurement – Type of Connection 1P3W

- 1) Switch on the instrument.
- 2)  Select the type of connection 1P3W using the “Wiring” function key (6). After selection, the following display is indicated with the symbol 1P3W (5.11):




Display Type of connection 1P3W


- 3) The measurement inputs are connected as illustrated in the following drawing:

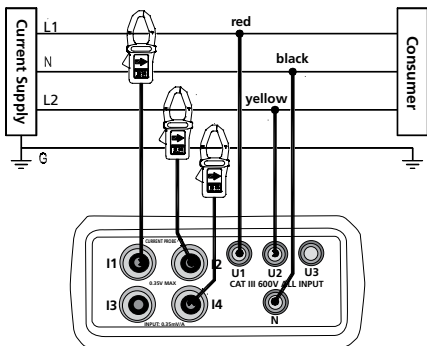

Type of connection 1P3W

- L1: phase 1 N: neutral conductor
L2: phase 2 G: protective earth


 Shaft direction (X1) (see also page 12).

 Current flow direction: The printed arrow on the clamp adapter must point to the electric power supply.

 The printed arrow on the clamp adapter must point to the electric power supply.

Connect the test leads to the measurement instrument as follows:

- 1) Connect black test lead to socket N.
- 2) Connect red test lead to socket U1.
- 3) Connect yellow test lead to socket U2.
- 4) Connect clamp adapter 1 to socket I1.
- 5) Connect clamp adapter 2 to socket I2.
- 6) If required, connect clamp adapter 4 to socket I4.

 This connection can be used to monitor the protective earth current.

Now, connect the tests leads using the alligator clips and the clamp adapter to the electric power supply to be tested.

- 1) Connect black test lead to neutral conductor N.
- 2) Connect red test lead to phase L1.
- 3) Connect yellow test lead to phase L2.
- 4) Open the clamp adapter 1 using the clamp opening lever and surround the live phase L1.

☞ Make sure that the clamp completely surrounds the conductor and that there is no air gap.

5) Connect in the same way clamp adapter 2 to the phase L2.

6) If required, connect the clamp adapter 4 in the same way to the protective earth.

The current measurement values are displayed on the screen.



Press the "POWER" key to switch between the measurement values of Phase L1, Phase L2, and the total value. The respectively displayed value can be assigned by means of the suffix 1, 2, or t (5.2.).

The following additional measurement values can be selected subsequently and indicated on the additional display (5.13):

	To display the mains frequency, press the "Hz" key (12).
	To display the phase angle, press the θ key (11).
	To display the power factor, press the "PF" key (10).
	If required, press the "I4" key (13) to display the protective earth current
	Individual measurements may be saved using the "M/MEMORY" key (19)
	To measure the energy values, press the "ENERGY" key (22).

☞ When this measurement type is selected, the automatic-power-off function of the instrument is deactivated.

The following values are displayed.




Display Measurement type energy in the lower part, the starting time of the measurement is displayed in the "STAR" line (5.43). Below, the current date and time are displayed during the measurement. I.e. the energy values are permanently calculated during running display. In the upper part of the display, the total values for the active power (5.4), the idle power (5.7), the apparent power (5.21), and the power factor (5.13) are displayed (to be recognised by the suffix "t") .

	The measurement is terminated when pressing the key (18). The [HOLD] symbol is displayed on the screen and the final calculation time appears in the "STOP" line (5.41).
	The instrument returns to normal measurement when pressing the "" key (16a).

☞ The measurement values for the energy measurement cannot be saved.

Three-phase Power Measurement, Aron connection – type of connection 3P3W2M


1) Switch on the instrument.

- 2)  Select the type of connection 3P3W2M using the “Wiring” function key (6). After selection, the following display is indicated with the symbol 3P3W2M (5.11):



Display Type of connection 3P3W2M

- 3) The measurement inputs are connected as illustrated in the following drawing:

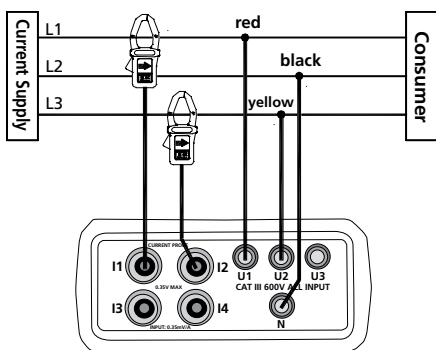



Type of connection 3P3W2M

L1: phase 1

L2: phase 2

L3: phase 3

 Shaft direction (X1) (see also page 12)

 Current flow direction: The printed arrow on the clamp adapter must point to the electric power supply.

Connect the test leads to the measurement instrument as follows:

- 1) Connect black test lead to socket N.
- 2) Connect red test lead to socket U1.
- 3) Connect yellow test lead to socket U2.
- 4) Connect clamp adapter 1 to socket I1.
- 5) Connect clamp adapter 2 to socket I2.

Now, connect the tests leads using the alligator clips and the clamp adapter to the electric power supply to be tested.

- 1) Connect black test lead to Phase L2.
- 2) Connect red test lead to phase L1.
- 3) Connect yellow test lead to phase L3.
- 4) Open the clamp adapter 1 using the clamp opening lever and surround the live phase 1.

☞ Make sure that the clamp completely surrounds the conductor and that there is no air gap.

5) Connect in the same way clamp adapter 2 to the phase L3.



Press the "POWER" key to switch between the measurement values of Phase L1, Phase and L2, and the total value. The respectively displayed value can be assigned by means of the suffix 1, 2, or t (5.2).

The following additional measurement values can be selected subsequently and indicated on the additional display (5.13):

	To display the mains frequency, press the "Hz" key (12).
	To display the phase angle, press the θ key (11).
	To display the power factor, press the "PF" key (10).
	If required, press the "I4" key (13) to display the protective earth current
	Individual measurements may be saved using the "M/MEMORY" key (19)
	To measure the energy values, press the "ENERGY" key (22).

☞ When this measurement type is selected, the automatic-power-off function of the instrument is deactivated.

The following values are displayed.




Display Measurement type energy

In the lower part, the starting time of the measurement is displayed in the "STAR" line (5.43). Below, the current date and time are displayed during the measurement. I.e. the energy values are permanently calculated during running display. In the upper part of the display, the total values for the active power /5.4), the idle power (5.7), the apparent power (5.21), and the power factor (5.13) are displayed (to be recognised by the suffix "t").

	The measurement is terminated when pressing the key (18). The [HOLD] symbol is displayed on the screen and the final calculation time appears in the "STOP" line (5.41).
	The instrument returns to normal measurement when pressing the "" key (16a).


☞ The measurement values for the energy measurement cannot be saved.

Three-phase Power Measurement, Star connection – type of connection 3P4W


- 1) Switch on the instrument.
- 2)  Select the type of connection 3P4W using the “Wiring” function key (6). After selection, the following display is indicated with the symbol 3P4W (5.11):




Display Type of connection 3P4W
The measurement inputs are connected as illustrated in the following drawing:

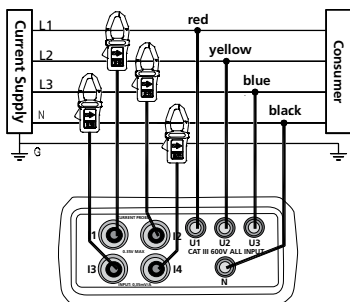

Type of connection 3P4W
L1: phase 1
L2: phase 2
L3: phase 3
N: neutral conductor
G: protective earth

 Shaft direction (X1) (see also page 12)

 Current flow direction: The printed arrow on the clamp adapter must point to the electric power supply.


 The printed arrow on the clamp adapter must point to the electric power supply.

Connect the test leads to the measurement instrument as follows:

- 1) Connect black test lead to socket N.
- 2) Connect red test lead to socket U1.
- 3) Connect yellow test lead to socket U2.
- 4) Connect blue test lead to socket U3.
- 5) Connect clamp adapter 1 to socket I1.
- 6) Connect clamp adapter 2 to socket I2.
- 7) Connect clamp adapter 3 to socket I3.
- 8) Connect clamp adapter 4 to socket I4.

Now, connect the tests leads using the alligator clips and the clamp adapter to the electric power supply to be tested.

- 1) Connect black test lead to neutral conductor N.
- 2) Connect red test lead to phase L1.
- 3) Connect yellow test lead to phase L2.
- 4) Connect blue test lead to phase L3.
- 5) Open the clamp adapter 1 using the clamp opening lever and surround the live phase L1.

 Make sure that the clamp completely surrounds the conductor and that there is no air gap.

- 1) Connect in the same way clamp adapter 2 to the phase L2.
- 2) Connect in the same way clamp adapter 3 to the phase L3.
- 3) Connect the clamp adapter 4 in the same way to the neutral conductor N.



Press the "POWER" key to switch between the measurement values of Phase L1, Phase L2 and Phase 3 and the total value. The respectively displayed value can be assigned by means of the suffix 1, 2, 3, or t (5.2.).

The following additional measurement values can be selected subsequently and indicated on the additional display (5.13):

	To display the mains frequency, press the "Hz" key (12).
	To display the phase angle, press the "θ" key (11).
	To display the power factor, press the "PF" key (10).
	If required, press the "I4" key (13) to display the protective earth current
	Individual measurements may be saved using the "M/MEMORY" key (19)
	To measure the energy values, press the "ENERGY" key (22).

☞ When this measurement type is selected, the automatic-power-off function of the instrument is deactivated.



The following values are displayed.



Display Measurement type energy


In the lower part, the starting time of the measurement is displayed in the "STAR" line (5.43). Below, the current date and time are displayed during the measurement. I.e. the energy values are permanently calculated during running display.

In the upper part of the display, the total values for the active power (5.4), the idle power (5.7), the apparent power (5.21), and the power factor (5.13) are displayed (to be recognised by the suffix "t") .

	The measurement is terminated when pressing the  key (18). The [HOLD] symbol is displayed on the screen and the final calculation time appears in the "STOP" line (5.41).
	The instrument returns to normal measurement when pressing the "  " key (16a).

☞ The measurement values for the energy measurement cannot be saved.


Single-phase Current Measurement

- 1) Switch on the instrument.
- 2)  Select the type of connection 1P2W using the "Wiring" function key (6). After selection, the following display is indicated with the symbol 1P2W (5.11):



Display Type of connection 1P2W

The measurement inputs are connected as illustrated in the following drawing:

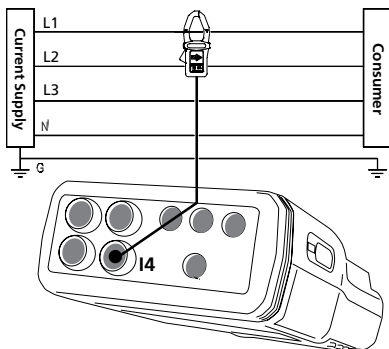



Type of connection current measurement


- L1: phase 1
- L2: phase 2
- L3: phase 3
- N: neutral conductor
- G: protective earth


 The printed arrow on the clamp adapter must point to the electric power supply.

- 1) Connect the test leads to the measurement instrument as follows:
- 2) Connect clamp adapter 4 to socket I4.
- 3) Now, connect clamp adapter to the conductor to be tested.
- 4) Open the clamp adapter 4 using the clamp opening lever and surround the live phase.

 Make sure that the clamp completely surrounds the conductor and that there is no air gap.

 To display the current in the additional display (5.13), press the "I4" key (13).


 The measurement range for the current measurement is between 0 and 250 A. When exceeding the measurement range, "OL" appears on the display.

 Individual measurements can be saved using the "M/MEMORY" key (19).

Data Memory – Saving individual measurements




This functions allows saving maximum 99 individual measurements.

A) Saving measurements



- 1) Switch on the instrument
- 2) Perform the measurement
- 3)  Save the desired measurement pressing the "M/MEMORY" key (19).

☞ When saving a measurement, the symbol [M] is briefly displayed, the storage place is indicated below.

B) Read out the measurement

- 1)  Press the "R/READ" key (20). The symbol [R] (5.43) is displayed.
- 2) The navigation keys "▲" and "▼" (16) allow to select and display the measurements, starting with the first storage place.
- 3)  Press the key  (16a) to leave the memory mode again.

C) Delete measurements

- 1) Switch off the instrument
- 2)  Press the "M/MEMORY" key (19) and keep it pressed.
- 3) Switch on the instrument.
- 4)  Keep the "M/MEMORY" key pressed until the symbol "CLr" is briefly indicated in the lower right corner of the display.

Recording with the Data Logger

This functions allows to record up to 21,000 measurement values by means of the internal data logger. For evaluation purposes, the internally recorded data must be transferred to a PC (please refer to page 32).


☞ To use the total data memory, delete the data memory for the data logger before starting the recording.


Delete Measurement Data within the Data Logger

☞ The values within the data logger may only be deleted using the software supplied (please refer to page 32).

Basic Settings


The data and the sampling rate should be set before starting the recording.



 For time setting, simultaneously press the "SET" (14) and "TIME" keys (15).

 The "TIME" symbol (5.44) is displayed and the line "Date and Time" is indicated with the following assignment:


Y-M	(5.24) display for year (Y) and month (M)
D-h	(5.27) display for day (D) and hour (h)
m-s	(5.31) display for minute (m) and second (s)






- 1) The respectively blinking value may now be modified using the navigation keys "▲" and "▼" (16).
- 2) The navigation keys "▶" and "◀" (16) may be used to change to the following or previous field.
- 3) If the setting is correct, the entry is terminated pressing the " " key (16a). Now, the symbol "INTV" (5.42) is displayed as well as the field to enter the sampling rate (5.32).
- 4) The value can be set using the navigation keys "▲" and "▼" (16).


 The following settings are possible: 5 s, 30 s, 1 min, 2 min.


- 5)  After having entered the sampling rate, the basic setting is terminated with the "  " key (16a).

Performing a Recording


- 1) Perform the measurement
- 2)  Press the "START" key (17) to start the measurement.

-  The symbol [M] (5.10) is displayed which will be briefly hidden during automatic saving, depending on the pre-set sampling rate.
-  The number of the current measurement series (5.9) is displayed below the symbol [M].
-  It is possible to save maximum 10 measurement series.
-  Maximum 12,000 measurement values can be saved within one measurement series.
-  The memory is full if FF is displayed.

- 3)  Terminate the recording by pressing the "STOP" key (18).

 If the instrument is switched off during running measurement, the recording data will be lost.


Determining the Rotary Field

- 1) Switch on the instrument
- 2)  Select the type of connection 3P4W using the "Wiring" function key (6). After selection, the following display is indicated with the symbol 3P4W (5.11):



Display Type of connection 3P4W

The measurement inputs are connected as illustrated in the following drawing:

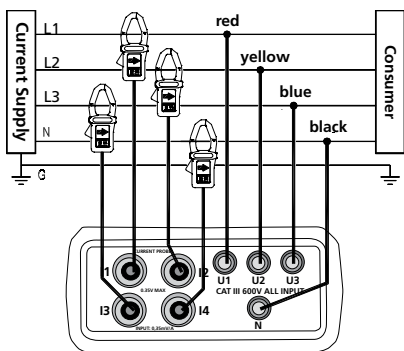


Type of connection 3P4W rotary field

- L1: phase 1
- L2: phase 2
- L3: phase 3
- N: neutral conductor
- G: protective earth


Connect the test leads to the measurement instrument as follows:



- 1) Connect black test lead to socket N.


 The connection to the neutral conductor is not required as the rotary field detection functions even without this connection.

- 2) Connect red test lead to socket U1.
- 3) Connect yellow test lead to socket U2.
- 4) Connect blue test lead to socket U3
- 5) Now, connect the tests leads to the electric power supply to be tested using the alligator clips.
- 6) Connect black test lead to neutral conductor N.
- 7) Connect red test lead to phase L1.
- 8) Connect yellow test lead to phase L2.
- 9) Connect blue test lead to phase L3.

 The minimum voltage for the rotary field detection amounts to 30 V.

- 10) Press the  key.

For clockwise rotary field, the symbol  (5.29) is displayed on the screen. Counterclockwise rotary field .

 If one or more conductor voltages are missing, an acoustic signal is audible and the rotary field detection is disabled.

Curve Shape and Harmonic Wave Measurement

☞ These measurements can only be performed via the PC using the supplied software (please refer to page 29).


Auto-Power-Off Function

This function switches the instrument off, 30 minutes after the last keystroke.

☞ The activated auto-power-off function can be recognised by the symbol (5.1) on the display.

To perform long-term measurements, for example, the auto-power-off function must be deactivated as follows:

1) Switch off the instrument

2)  Press the "HOLD" key and keep it pressed while switching on the instrument. Keep the "HOLD" key pressed until the total display appears.



If the HOLD function has also been activated, press the "HOLD" key again.

☞ If the auto-power-off function has been deactivated, the symbol \emptyset is no longer displayed on the screen.

☞ Every time after the instrument has been switched on, the auto-power-off function is automatically activated.

☞ The auto-power-off function is automatically deactivated for the following measurement functions:

- Energy measurement
- Recording with the data logger
- Connection to the PC

Connection to the PC Interface

The Amprobe Power Analyzer is connected to a free interface (COM1 through COM 8) using the interface cable included with the delivery. The interface is selected after the program start.

Windows-Software

To use the software supplied with the instrument, it must be installed on a PC. To install or operate the software, you require basic PC and operating system knowledge.

System Requirements

Minimum requirements:

- PC with Pentium III / Celeron 600 MHz processor or higher
- CD-ROM drive
- two serial interfaces (one for the mouse and one for the Power Analyzer)
- at least 512 MB RAM
- at least 1 GB hard-disk memory
- Windows XP/2000 or later
- Screen resolution: 1024 x 768 pixels
- Mouse

Recommended:

- PC as from Pentium III 600 MHz processor or comparable
- CD-ROM drive
- 2 serial interfaces (one for the mouse, the other for the Power Analyzer)
- minimum 256 MB RAM
- minimum 155 MB hard disk memory
- Windows 2000/XP or higher
- Screen resolution: 1024 X 768 pixel
- Mouse

Installation

⚠ Viruses! In the present state of the art it cannot be guaranteed 100 % that the enclosed data carrier is free from viruses. Despite a careful virus test with the latest anti-virus programs we cannot be held liable for any damage caused by viruses.

On installation of the software the required files are copied onto the hard disk.

Restart Windows or quit these programs in case of running processes.

Programs running or active in the background (such as virus scanner, et cetera) have to be shut-down as well. Especially virus scanners might influence the installation and result in malfunctions of an installed software.

Place the data carrier in the drive to be used for this purpose.

Start the Explorer and select the drive.

Select the "Setup.exe" or "Autorun.exe" file, start the installation with a double click and follow the other installation instructions.


Program Functions

After the program start of the "PowerAnalyzer" software, the window for the selection of the interface will appear.



☞ Select the requested interface and press OK to confirm.

Now, the following main menu will be displayed:

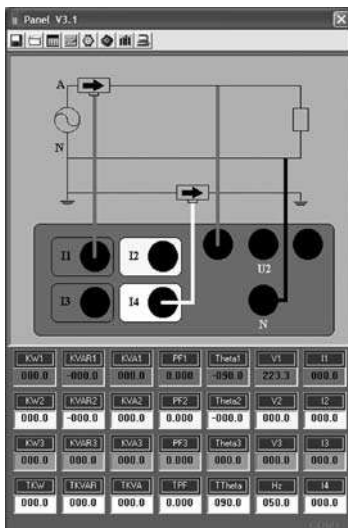

The main menu is divided into three areas:

A: Buttons – Programme functions



- (a) Starting and saving measurement
- (b) Opening the file
- (c) Online measurement / data in form of a list
- (d) Online measurement / data in form of a graph
- (e) Sampling rate
- (f) Data logger – Analysis of the data saved in the measuring instrument
- (g) Harmonic measurement
- (h) Setting date and time

B: Graph with the type of connection selected on the measuring instrument.

C: Current measured values

Used symbols

KW1, KW2, KW3	Effective power in kW on phase 1 to 3
KVAR1, KVAR2, KVAR3	Reactive power in kVAR on phase 1 to 3
KVA1, KVA2, KVA3	Apparent power in kVA on phase 1 to 3
PF1, PF2, PF3	Power factor on phase 1 to 3
Theta1, Theta2, Theta3	Phase angle on phase 1 to 3
V1, V2, V3	Voltage on phase 1 to 3
I1, I2, I3	Current on phase 1 to 3
TKW	Total value of the effective power
TKVAR	Total value of the reactive power
TKVA	Total value of the apparent power
TPF	Total power factor
TTheta	Total phase angle (theoretical value)
Hz	Mains frequency
I4	Current on measuring input I4


☞ If no device is connected or still switched off when starting the program, no measured values will be indicated, i. e. these fields will remain empty.

In case of an existing connection, the messages COM and the nos. of the enabled interfaces will be indicated in a message. If there is no connection, the message No COM will be displayed.

Starting and saving measurement:


Click the (a) [Insert graph] button to start the online measurement.

After having clicked the button, the window for the entry of the file name and of the path for the measurement or measurements to be saved will be displayed.

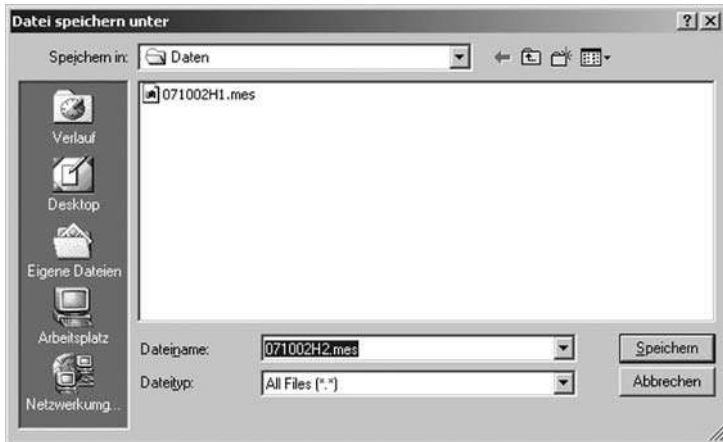

☞ The file name may consist of the current date and must consist of the .mes file index.

☞ If more than 10000 measured values are saved, the measured values will be saved automatically. The file name will consist of the selected file name and the supplement -1. The next measured values from 10001 to 20000 will be saved in a second file with the supplement -2. This shall also apply to all 10000 measured values to follow – until the measurement is aborted.

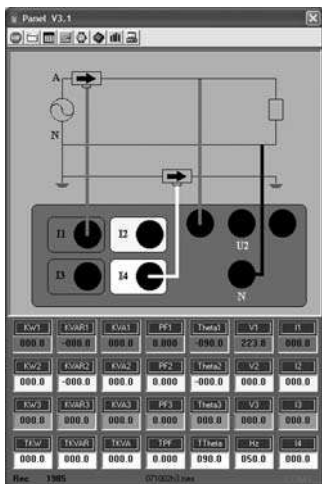

For checking purposes, the number of the already saved measured values and the file name are displayed in the line at the bottom.

When clicking the button, the running measurement will be completed and the saving process will be completed.

Opening file – Analysis of the data saved in the PC

By clicking the (b) [Insert graph] button, the saved measurements can be loaded.

After clicking on the button, the window for the selection of the file will appear.




After having selected the requested file, the saved data will be displayed in form of a table.


No.	Date	Time	KSw1	KVAR1	KVA1	PF1	Theta1	V1	I1	KSw2	KVAR2				
209965	2007	07	12	22	45	30	014.8	-000.9	014.9	0.997	-003.8	224.4	066.4	015.2	-000.0
209966	2007	07	12	22	45	31	014.8	-000.0	014.8	1.000	-000.0	224.3	066.4	015.2	-000.0
209967	2007	07	12	22	45	32	014.8	-000.0	014.8	1.000	-000.0	224.3	066.4	015.1	-000.0
209968	2007	07	12	22	45	33	014.8	-000.0	014.8	1.000	-000.0	224.0	066.3	015.1	-000.0
209969	2007	07	12	22	45	34	014.8	-000.0	014.8	1.000	-000.0	224.2	066.4	015.1	-000.0
209970	2007	07	12	22	45	35	014.8	-000.0	014.8	1.000	-000.0	224.2	066.4	015.1	-000.0
209971	2007	07	12	22	45	36	014.8	-000.0	014.8	1.000	-000.0	224.1	066.4	015.1	-000.0
209972	2007	07	12	22	45	37	014.8	-000.0	014.8	1.000	-000.0	224.1	066.4	015.1	-000.0
209973	2007	07	12	22	45	38	014.8	-000.0	014.8	1.000	-000.0	224.2	066.4	015.1	-000.0
209974	2007	07	12	22	45	39	014.8	-000.0	014.8	1.000	-000.0	224.1	066.4	015.1	-000.0
209975	2007	07	12	22	45	40	014.8	-000.0	014.8	1.000	-000.0	224.1	066.4	015.1	-000.0
209976	2007	07	12	22	45	41	014.7	-000.1	014.8	0.999	-007.7	224.1	066.4	015.1	-000.0
209977	2007	07	12	22	45	42	014.7	-000.8	014.8	0.998	-003.3	224.2	066.4	015.1	-000.0
209978	2007	07	12	22	45	43	014.7	-000.8	014.8	0.998	-003.3	224.2	066.4	015.1	-000.0
209979	2007	07	12	22	45	44	014.8	-000.8	014.9	0.997	-003.8	224.4	066.4	015.1	-000.0
209980	2007	07	12	22	45	45	014.8	-000.0	014.8	1.000	-000.0	224.3	066.4	015.1	-000.0
209981	2007	07	12	22	45	46	014.8	-000.0	014.8	1.000	-000.0	224.3	066.4	015.1	-000.0
209982	2007	07	12	22	45	47	014.8	-001.3	014.9	0.995	-005.3	224.4	066.4	015.1	-001.0
209983	2007	07	12	22	45	48	014.8	-000.9	014.9	0.997	-003.8	224.4	066.4	015.1	-001.0
209984	2007	07	12	22	45	49	014.8	-000.9	014.9	0.997	-003.8	224.4	066.4	015.1	-000.0
209985	2007	07	12	22	45	50	014.8	-000.0	014.8	1.000	-000.0	224.1	066.3	015.1	-000.0
209986	2007	07	12	22	45	51	014.8	-000.9	014.9	0.997	-003.8	224.4	066.4	015.1	-000.0
209987	2007	07	12	22	45	52	014.8	-000.9	014.9	0.997	-003.8	224.4	066.4	015.1	-000.0
209988	2007	07	12	22	45	53	014.8	-000.0	014.8	1.000	-000.0	224.1	066.3	015.1	-000.0
209989	2007	07	12	22	45	54	014.8	-000.9	014.9	0.997	-003.8	224.5	066.4	015.1	-000.0
209990	2007	07	12	22	45	55	014.8	-000.9	014.9	0.997	-003.8	224.5	066.4	015.1	-000.0
209991	2007	07	12	22	45	56	014.8	-000.4	014.8	0.999	-001.6	224.4	066.4	015.0	-000.3
209992	2007	07	12	22	45	57	014.8	-000.0	014.8	1.000	-000.0	224.2	066.4	015.0	-000.3
209993	2007	07	12	22	45	58	014.8	-000.0	014.8	1.000	-000.0	224.2	066.4	015.0	-000.3
209994	2007	07	12	22	45	59	014.8	-000.9	014.9	0.997	-003.8	224.6	066.4	015.1	-000.0
209995	2007	07	12	22	46	00	014.8	-000.9	014.9	0.997	-003.8	224.4	066.4	015.1	-000.0
209996	2007	07	12	22	46	01	014.8	-000.9	014.9	0.997	-003.8	224.4	066.4	015.1	-001.0
209997	2007	07	12	22	46	02	014.8	-000.9	014.9	0.997	-003.8	224.4	066.4	015.1	-000.0
209998	2007	07	12	22	46	03	014.9	-000.0	014.9	1.000	-000.0	224.9	066.6	015.1	-000.0
209999	2007	07	12	22	46	04	014.9	-000.0	014.9	1.000	-000.0	224.9	066.6	015.1	-000.0
210000	2007	07	12	22	46	05	014.9	-000.0	014.9	1.000	-000.0	224.6	066.4	015.1	-000.0

Click the button to print the values in form of a table.

Click the button to change over to the graphical representation.

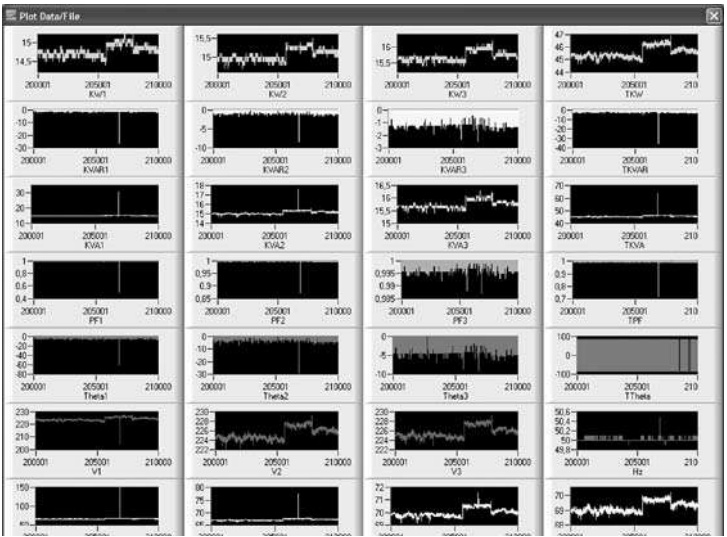

For a better general survey, all input signals are represented in form of a graph.
Click the graph to enlarge it.

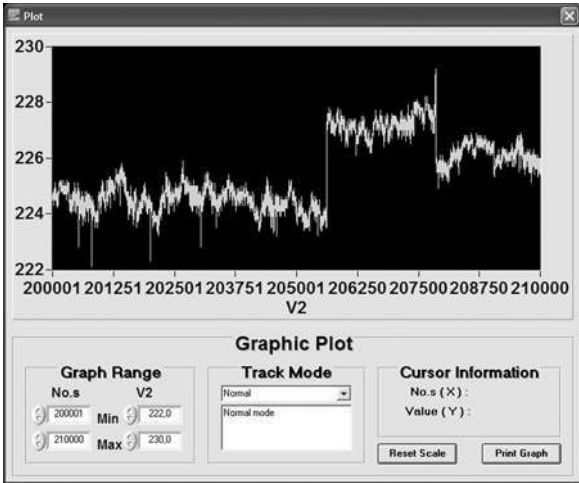

“Graph Range” area

The display area can be modified by direct input or using the arrow keys.

“Track Mode” area

Mouse functions for the graphic display



Normal: no function

Cursor

Coordinates: Cursor display with additional indication of the measured value in the “Cursor Information” area.

PanXY: Shifting the graph in X and Y direction

PanX: Shifting the graph in X direction

PanY: Shifting the graph in Y direction

Note: To shift the graph, click the graph, keep the left mouse key pressed and drag in the requested direction.

ZoomXY: Zoom-up of the section: Enlargement of the X and Y axis.

ZoomX: Zoom-up of the section: Enlargement of the X axis.

ZoomY: Zoom-up of the section: Enlargement of the Y axis.

☞ Use the mouse to select the part of the graph to be zoomed up with a rectangle or border lines.

“Reset Scale” button:

Change back to the display of the complete diagram.


“Print Graph” button:

Print-out of the displayed diagram (screen).

☞ Saved data can be exported to external programs for further processing, such as MS EXCEL.


Online measurement / data in form of a list

Click the (c)  button to start the online measurement.

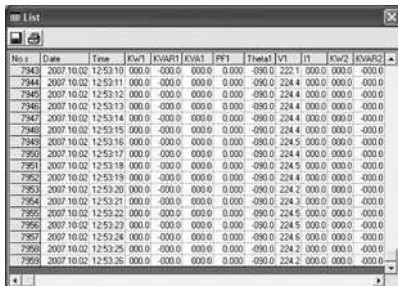

No.s	Date	Time	Kw1	KVAR1	KVA1	PF1	Theta1	V1	I1	Kw2	KVAR2
7943	2007.10.02	12:53:10	0.000	-0.000	0.000	0.000	-99.0	222.1	0.000	0.000	-0.000
7944	2007.10.02	12:53:11	0.000	-0.000	0.000	0.000	-99.0	224.4	0.000	0.000	-0.000
7945	2007.10.02	12:53:12	0.000	-0.000	0.000	0.000	-99.0	224.4	0.000	0.000	-0.000
7946	2007.10.02	12:53:13	0.000	-0.000	0.000	0.000	-99.0	224.4	0.000	0.000	-0.000
7947	2007.10.02	12:53:14	0.000	-0.000	0.000	0.000	-99.0	224.4	0.000	0.000	-0.000
7948	2007.10.02	12:53:15	0.000	-0.000	0.000	0.000	-99.0	224.4	0.000	0.000	-0.000
7949	2007.10.02	12:53:16	0.000	-0.000	0.000	0.000	-99.0	224.5	0.000	0.000	-0.000
7950	2007.10.02	12:53:17	0.000	-0.000	0.000	0.000	-99.0	224.4	0.000	0.000	-0.000
7951	2007.10.02	12:53:18	0.000	-0.000	0.000	0.000	-99.0	224.5	0.000	0.000	-0.000
7952	2007.10.02	12:53:19	0.000	-0.000	0.000	0.000	-99.0	224.4	0.000	0.000	-0.000
7953	2007.10.02	12:53:20	0.000	-0.000	0.000	0.000	-99.0	224.2	0.000	0.000	-0.000
7954	2007.10.02	12:53:21	0.000	-0.000	0.000	0.000	-99.0	224.3	0.000	0.000	-0.000
7955	2007.10.02	12:53:22	0.000	-0.000	0.000	0.000	-99.0	224.5	0.000	0.000	-0.000
7956	2007.10.02	12:53:23	0.000	-0.000	0.000	0.000	-99.0	224.5	0.000	0.000	-0.000
7957	2007.10.02	12:53:24	0.000	-0.000	0.000	0.000	-99.0	224.6	0.000	0.000	-0.000
7958	2007.10.02	12:53:25	0.000	-0.000	0.000	0.000	-99.0	224.2	0.000	0.000	-0.000
7959	2007.10.02	12:53:26	0.000	-0.000	0.000	0.000	-99.0	224.2	0.000	0.000	-0.000

All input signals are listed in an overall list with values.

Click the  button to save these listed measured values.

After having clicked the button, the window for the entry of the file name and of the path for the measurement or measurements to be saved will be displayed.

The file name may consist of the current date and must consist of the .mes file index.

☞ If more than 10000 measured values are saved, the measured values will be saved automatically. The file name consists of the date and the current time, e. g. 1002132833.mes [Date 02.10., time 13:28:33]. After having saved the measurement, it will be carried on with the measured value no. 10001. The same applies to the next or all further 10000 measured values.

Click the button to print the values in form of a table.

Online measurement / data in form of a graph

Click the (d) [Insert graph] button to start the online measurement.


The input signals are represented in form of a graph over an extended period of time.

Click the graph to zoom it up.

☞ For the description of the other display functions and buttons, please refer to page 29.

Sampling rate

Click the (e) [Insert graph] button to open the window to set the sampling rate for the online measurement.

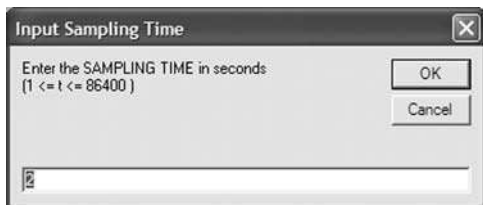


The permissible input values range between 1 and 86400 sec. The preset value is 2 s

Data logger – Analysis of the data saved in the measuring instrument

Click the (f) [Insert graph] button to open the window to read the data saved in the measuring instrument.

If there are no saved data, the following error message will be displayed:

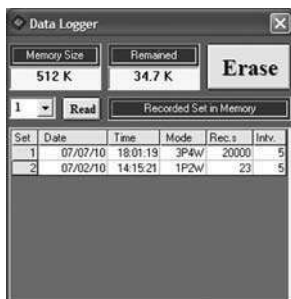

The Memory Size field shows the value for the max. available memory space. The Remained field shows the free memory space.

If there are several measurements, they will be displayed in a selection window.

To transfer a measurement, proceed as follows:

- Select the requested number of the measurement (Set) in the adjacent field on top and press the "Read" button.
or
- Click the requested number in the Set column to start the transmission.

If a measured value recording is enabled in the measuring instrument, a data transmission is not possible.

The reading and generation of the list can take some minutes in case of a large number of measured values or in case of full memory.

If one measurement includes more than 10000 measured values, they will be divided into two lists or files. The following note will be displayed:



Click OK to confirm. The two lists will be generated.

No.	Time	Value	Unit	Min/Max	Error	Unit	Speed	Unit	ID	Error	Count
1	2007-07-10 18:01:19	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
2	2007-07-10 18:01:24	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
3	2007-07-10 18:01:29	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
4	2007-07-10 18:01:34	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
5	2007-07-10 18:01:39	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
6	2007-07-10 18:01:44	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
7	2007-07-10 18:01:49	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
8	2007-07-10 18:01:54	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
9	2007-07-10 18:01:59	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
10	2007-07-10 18:02:04	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
11	2007-07-10 18:02:09	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
12	2007-07-10 18:02:14	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
13	2007-07-10 18:02:19	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
14	2007-07-10 18:02:24	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
15	2007-07-10 18:02:29	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
16	2007-07-10 18:02:34	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
17	2007-07-10 18:02:39	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
18	2007-07-10 18:02:44	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
19	2007-07-10 18:02:49	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
20	2007-07-10 18:02:54	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
21	2007-07-10 18:02:59	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
22	2007-07-10 18:03:04	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
23	2007-07-10 18:03:09	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
24	2007-07-10 18:03:14	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
25	2007-07-10 18:03:19	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
26	2007-07-10 18:03:24	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
27	2007-07-10 18:03:29	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
28	2007-07-10 18:03:34	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
29	2007-07-10 18:03:39	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
30	2007-07-10 18:03:44	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
31	2007-07-10 18:03:49	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
32	2007-07-10 18:03:54	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
33	2007-07-10 18:03:59	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
34	2007-07-10 18:04:04	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00

No.	Time	Value	Unit	Min/Max	Error	Unit	Speed	Unit	ID	Error	Count
10000	2007-07-11 07:54:28	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
10001	2007-07-11 07:54:33	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
10002	2007-07-11 07:54:38	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
10003	2007-07-11 07:54:43	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
10004	2007-07-11 07:54:48	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
10005	2007-07-11 07:54:53	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
10006	2007-07-11 07:54:58	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
10007	2007-07-11 07:55:03	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
10008	2007-07-11 07:55:08	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
10009	2007-07-11 07:55:13	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
10010	2007-07-11 07:55:18	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
10011	2007-07-11 07:55:23	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
10012	2007-07-11 07:55:28	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
10013	2007-07-11 07:55:33	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
10014	2007-07-11 07:55:38	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
10015	2007-07-11 07:55:43	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
10016	2007-07-11 07:55:48	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
10017	2007-07-11 07:55:53	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
10018	2007-07-11 07:55:58	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
10019	2007-07-11 07:56:03	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
10020	2007-07-11 07:56:08	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
10021	2007-07-11 07:56:13	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
10022	2007-07-11 07:56:18	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
10023	2007-07-11 07:56:23	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
10024	2007-07-11 07:56:28	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
10025	2007-07-11 07:56:33	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
10026	2007-07-11 07:56:38	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
10027	2007-07-11 07:56:43	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
10028	2007-07-11 07:56:48	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
10029	2007-07-11 07:56:53	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
10030	2007-07-11 07:56:58	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
10031	2007-07-11 07:57:03	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
10032	2007-07-11 07:57:08	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
10033	2007-07-11 07:57:13	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
10034	2007-07-11 07:57:18	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00
10035	2007-07-11 07:57:23	0.00	A	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00

Click the button to save these listed measured values.

For the further analysis of the saved data please refer to the description given in page 29.

Deleting data logger memory

Click the (ERASE) button to delete all measurements saved in the Power Analyzer.

There will be an additional safety query prior to the deletion process.



Click [OK] to confirm the deletion process or click [Cancel] to cancel it.

Harmonic measurement

In this window you can carry out simple harmonic measurements up to the 31st harmonic.

The total value of the harmonic distortion THD in percent is calculated according to the following equation:

$$\%THD = \frac{100 \sqrt{A(f_2)^2 + A(f_3)^2 + \dots + A(f_n)^2}}{A(f_1)}$$

whereas:

A(f1) = fundamental wave,

A(fn) = harmonic with number n.

The number of harmonics (n) for the calculation of THD can be selected.

Click the (g) [Insert graph] button, to open the window for the harmonic measurement.



Select the requested input signal in the (A) window via the arrow keys.

The following input signals can be selected:

A Phase Voltage = voltage on phase L1

B Phase Voltage = voltage on phase L2

C Phase Voltage = voltage on phase L3

A Phase Current = current on phase L1



B Phase Current = current on phase L2

C Phase Current = current on phase L3

⚠ Via the I4 input, harmonics cannot be measured.


Select the requested input frequency in the (B) window.

Click the [OK] button to start the measurement.

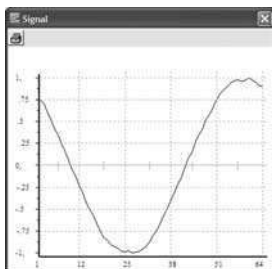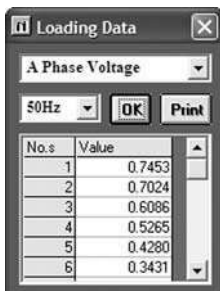

The values of the 64 sampling values are listed under No.s. In addition, a window with the representation of the signal curve will be displayed during the measured time interval of 20 ms (at 50 Hz).

Harmonic window:

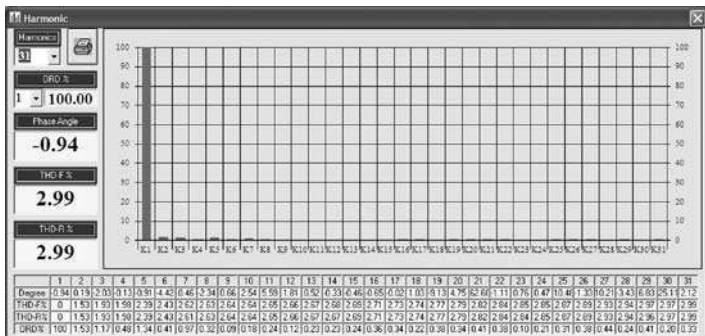

Field "Harmonics" - Number of harmonics for the calculation of THD:

To select the requested last harmonic use the arrow keys or directly enter or modify it in the display field.

Example: If 5 is selected, the total value THD from number 1 to 5 will be calculated. The "Harmonic number 1" is identical to the fundamental wave.

"ORD%" field - ordinal number of the harmonic:

Use the arrow keys to select the requested harmonic. The percentage of this harmonic is shown in the adjacent field.

"Phase Angle" field

Phase angle between voltage and current (is calculated via Fast Fourier Transformation)

The displayed value refers to the ordinal number selected under "ORD%".

" THD-F% field: Total value " of the harmonic distortion, defined for voltage as

$$THD - F\%(v) = \frac{\sqrt{\sum_{n=2}^{40} V_n^2}}{V_1}$$

" THD-R% field: Total value " of the harmonic distortion, defined for voltage as

$$THD - R\%(v) = \frac{\sqrt{\sum_{n=2}^{40} V_n^2}}{\sqrt{\sum_{n=1}^{40} V_n^2}}$$

☞ The displayed values refer to the harmonic selected under "Harmonics".

☞ If the distortions are only slight, both values are nearly identical.

☞ In the "NaN" message is displayed in a window, there is no valid value.

Click the button to print the complete screen

Setting date and time

Click the (h) [Insert graph] button to transmit the current system time of the PC to the power measuring instrument.


Data transfer to an external program

Example: Evaluation of the measured values by importing the data to MS EXCEL. Open the "Open file" function in MS EXCEL.



☞ Select "Alle Dateien" (All files) data type

Settings in MS EXCEL text wizard

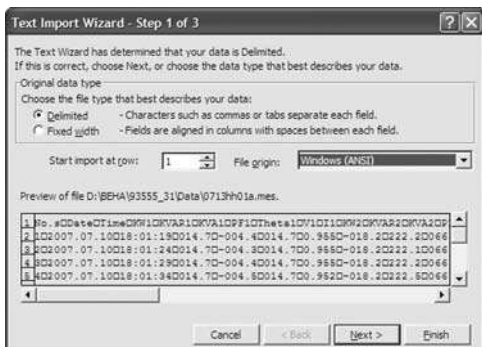

☞ Setting the data type: Do not select "fixed width", but "delimited".




☞ Setting the delimiter: select Tab and text qualifier: select "none".



☞ The data format of the second column has to be set to YMT date format.

As a result, you will receive the read raw data in the correct spreadsheet form.

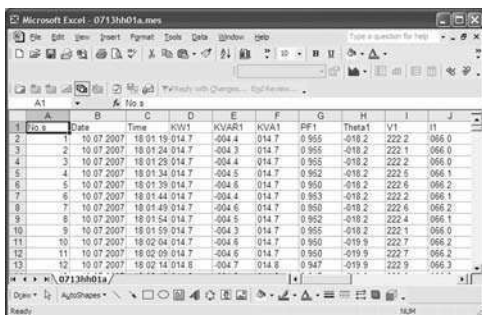

☞ Now, you can edit the data at discretion.

Maintenance

When using the instrument in compliance with the users manual, no special maintenance is required.

Cleaning

If the instrument is dirty after daily usage, it is advised to clean it by using a damp cloth and a mild household detergent

⚠ Prior to cleaning, ensure that instrument is switched off and disconnected from external voltage supply and any other instruments connected (such as UUT, control instruments, etc.).

☞ Never use acid detergents or dissolvants for cleaning.

Calibration Interval


We suggest a calibration interval of one year. If the instrument is used very often or if it is used under rough conditions we recommend shorter intervals. If the instrument is used few times only the calibration interval can be extended on to 3 years.

Replacement of batteries

If the symbol **BT** (5.15) is displayed change the batteries.

⚠ Remove all test leads before opening the case.

⚠ The safety references must be followed.

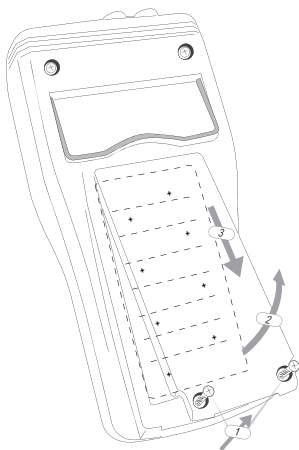

- 1) Using a screwdriver to remove the two screws from the bottom case (backside)
- 2) Remove the battery cover
- 3) Take out old batteries
- 4) Insert new batteries (respect battery polarity)


☞ The correct polarity of the batteries is indicated on the inside of the bottom case.

- 5) Close battery cover and tighten the screws.

Batteries

If the adjusted date and time is not being saved, the small coin cell needs to be replaced.

- 1) Use a screwdriver to remove the four screws from the case (backside)
- 2) Remove the holster
- 3) Remove the battery cover
- 4) Insert new battery

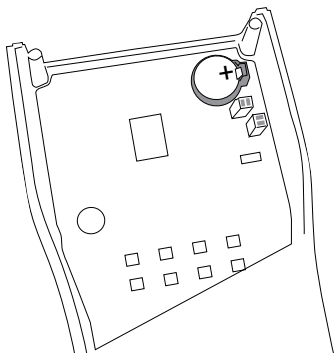

ⓘ The correct polarity of the batteries is indicated on the rear case. The connection "+" must be on the upper side.

- 5) Close cover and tighten the screws.

ⓘ Always be careful with the connection cable for power supply

ⓘ Please consider your environment when you dispose of your one-way batteries. They belong in a disposal for hazardous waste. In most cases, the batteries can be returned to their point of sale.

⚠ Please, comply with the respective valid regulation regarding the return, recycling and disposal of used batteries.

Technical Data

(valid for 23 °C ± 5 °C, for less than 70 % relative humidity).

Voltage measurement:3 input channels with common reference point "N"

Measurement range:0 to 600 Vrms

Display range:0 to 999.9 Vrms

Resolution:0.1V

Accuracy:± (1% rdg + 10D) for voltage > 80 V

Mains frequency:50 Hz

Input impedance:2 MOhm

Overload protection:1000 Vrms

Current measurement

Measurement range:

Input I1, I2, I33 A to 999.9 A

Input I43 A to 250 A

Display range:0 A to 999.9 A

Resolution:0.1 A

Accuracy:± (2.5 % rdg +15 D)

Reduction ratio of current clamp: 0.35 mV/A

Clamp opening:40 mm

Admissible overload:10 % (for sinusoidal wave form); max. 30 seconds

Active power P

Display of active power of individual input or total value, as desired

Display range:0 to 999.9 kW

A negative active power can be recognised by the sign "-".

Resolution :0.1 kW

Accuracy (for PF ≥ 0,5): ± (3.5 % rdg + 20 D)

Accuracy (for PF < 0,5): ± (4.5 % rdg + 40 D)

Apparent power S (calculation from the rms values of voltage and current)

Display of apparent power of an individual input or the total value, as desired

Display range:0 – 999.9 kVA

Resolution:0.1 kVA

Type of connection 1P2W

Accuracy (for PF ≥ 0,5): ± (3.5 % rdg + 20 D)

Accuracy (for PF < 0,5): ± (4.5 % rdg + 40 D)

Type of connection 1P3W, 3P3W, 3P4W

Accuracy (for PF ≥ 0,5): ± (3.5 % rdg + 20 D)

Accuracy (for PF < 0,5): ± (7.5 % rdg + 40 D)

Idle power Q (calculation out of active and apparent power)

Display of idle power of an individual input or the total value, as desired

Display range:0 to 999.9 kVAr

A negative sign "-" shows a leading current.

Resolution:0.1 kVAr

Formula: $Q = \sqrt{S^2 - P^2}$

Power factor PF (cos (f) (calculation out of active and apparent power)

Display of power factor of an individual input or the total value, as desired

Measurement range: 0 ...+1

A negative sign "-" shows a leading current.

Resolution:0.001

Accuracy:± (1 % rdg + 25 D)

Phase angle (f) (calculation out of power factor)

Display of phase angle of an individual input or the total value, as desired

Measurement range: 0° to 90°

A negative sign “-” shows a leading current.

Resolution:0.1°

Accuracy:± 4°



Frequency measurement (for voltage range > 80 V)

Measurement range:45 to 80 Hz

Resolution:0.1 Hz

Accuracy:± (1 % rdg + 10D) for voltage > 80 V

Rotary field detection (for conductor voltages > 80 V)

Display for clockwise rotary field:  123 , Display for counterclockwise rotary field:  123

Energy measurement – active power (kWh)

Display of the total value of all active power values

Range	Resolution	Accuracy	Sampling Rate
3.999 kWh	0.001 kWh	± (3.5% rdg. + 20D)	1 second
39.99 kWh	0.01 kWh		
399.9 kWh	0.1 kWh		
3.999 MWh	0.001 MWh		
39.99 MWh	0.01 MWh		
119.3 MWh	0.1 MWh		

Energy measurement – apparent power (kVAh)

Display of the total value of all apparent power values.

Range	Resolution	Accuracy	Sampling Rate
3.999 kVAh	0.001 kVAh	± (3.5% rdg. + 20D)	1 second
39.99 kVAh	0.01 kVAh		
399.9 kVAh	0.1 kVAh		
3.999 MVAh	0.001 MVAh		
39.99 MVAh	0.01 MVAh		
119.3 MVAh	0.1 MVAh		

Energy measurement – idle power (kvarh)

Display of total values of all idle power values.

Range	Resolution	Accuracy	Sampling Rate
3.999 kvarh	0.001 kvarh	± (3.5% rdg. + 20D)	1 second
39.99 kvarh	0.01 kvarh		
399.9 kvarh	0.1 kvarh		
3.999 Mvarh	0.001 Mvarh		
39.99 Mvarh	0.01 Mvarh		
119.3 Mvarh	0.1 Mvarh		

Harmonics measurement

This measurement is only possible via a PC.

Measurement up to the 31st harmonics

Measurement inputs: U1, U2, U3, I1, I2, I3

Voltage range > 80 V

Current range > 50 A

Sampling range: approx. 3 s.

Sampling resolution per measurement: 64 points

Technical Data – General Information

Display:multiple function LCD
Refresh rate:approx. 2 seconds
(Backlight):automatic-power-off after approx. 30 s
Data logger:.....512 Kb, non-volatile memory
.....max. 21 000 measurement values, max. 10 measurement series
.....0max. 10 000 measurement values for on measurement series
Sampling rate (adjustable):5 seconds, 30 seconds, 1 min, 2 min
Data transfer:via optically isolated RS-232 interface
Manual data memory:Max: 99 measurement
Power supply:8 x 1.5V batteries LR6 (Alkaline)
Battery life cycle:typ. 50 h
Auto-power-off (can be switched off) after approx. 30 min
Internal memory Speicher:1 x 3 V-Lithium battery CR2032
Battery life cycle:Typ. 2400 h
Mains adapter:12 - 15 V/300 mA
Electrical supply voltage:230 VAC (+10 %/-20 %)
Frequency range:.....42 to 63 Hz
Power consumption:approx. 10 VA
Overvoltage class:CAT III 600 V
Degree of contamination:2
Protection:II
Type of protection:IP 30

Dimensions (L x W x H)

Measurement instrument235 x 117 x 54 mm
Current clamp193 x 88 x 40 mm

Weight

Measurement instrument
(incl. Batteries):.....approx. 730 g
Current clampapprox. 335 g
Height above sea level:up to 2000 m
Service temperature range:0°C to +50°C/ max. 80% rel. humidity,
0°C to +40°C/ max. 80% rel. humidity
(mains power supply unit)

Storage temperature range:-10°C to +60°C/ max. 70% rel. humidity

Temperature coefficient for
the ranges 0°C to +18°C and

+28°C to +50°C:0.1/K times the specified accuracy

Visit <https://mod-e.ru/> **for**

- Catalog
- Application notes
- Product specifications
- User manuals



Please Recycle