

**Anritsu** Advancing beyond

# Site Master™

Handheld Cable & Antenna Analyzer  
Featuring Classic and Advanced Modes

## S331L

2.0 MHz to 4.0 GHz Cable & Antenna Analyzer  
50 MHz to 4.0 GHz Power Meter



## Introduction

Anritsu introduces its ninth generation, compact handheld Cable & Antenna Analyzer for installation and maintenance of antenna systems.

## Optimized for Field Use

- > 8 Hour Battery Life
- Rugged and Reliable
- Instant On from Standby Mode
- Highest RF Immunity
- Built-in InstaCal™ Module
  - Fast, One-connection Calibration
- FlexCal™ Calibration
  - One Calibration for All Frequencies
- Optical connector inspection with IEC 61300-3-35 based Pass/Fail standard (Requires USB Video Inspection Probe, sold separately)
- Built-in Power Meter
- High Accuracy USB Power Meter (Requires USB Sensor, sold separately)
- Impact, Dust, and Splash Resistant
- Smallest, Lightest Site Master™

## Easy to Use

- Integrated Help Function
- S331D-like Classic Mode
- S331E-like Advanced Mode
  - Additional Markers
  - Customizable Shortcuts
  - Full-screen View
- Multiple USB Ports
- 800 x 480 7" TFT Touch Screen
  - Alphanumeric Keyboard
  - EZ Name Quick Matrix
- Backlit Keypad
- easyTest™

## Efficient Sweep Management

- Internally Store >1000 Files
  - Sweeps, Setups, Screen Shots
- Line Sweep Tools (LST) Software
  - Edit Sweeps, Rename, Archive
  - Generate PDF or HTML Reports
- Fast Preview of Stored Sweeps
- Standard \*.dat Sweep File Format
- Compatible with HHST
  - Widely Accepted by Operators
- Location Data with Compatible USB GPS Module



Site Master™ S331L Cable & Antenna Analyzer Featuring 7.0 in Daylight Viewable Touch Screen  
Compact Size: 250 mm x 177 mm x 61 mm (10.0 in x 7.1 in x 2.4 in), Lightweight: < 2.0 kg (4.4 lb)

Table of Contents

Definitions..... 3  
 Cable and Antenna Analyzer..... 4  
 Internal Power Meter..... 6  
 High Accuracy Power Meter..... 6  
 Video Inspection Probe..... 7  
 General Specifications..... 8  
 Anritsu Tool Box and Line Sweep Tools..... 9  
 easyTest Tools (for your PC)..... 9  
 Ordering Information..... 10  
 Calibration and Extended Warranty Options..... 10  
 Calibration Only Options..... 10  
 Standard Accessories..... 10  
 USB Power Sensors..... 11  
 Optional Accessories..... 11  
 Documentation..... 16

Definitions

All specifications and characteristics apply to Revision 2 instruments under the following conditions, unless otherwise stated:

Warm-Up Time	After 5 minutes of warm-up time, where the instrument has completely stabilized to the ambient temperature.
Frequency Reference	Internal frequency reference is used.
Calibration	Instrument is within the recommended calibration cycle of 12 months. Cable and Antenna Analyzer measurements applicable after standard OSL calibration is performed using Anritsu calibration components.
Typical Performance	Typical specifications in parenthesis () describe performance that will be met by a minimum of 80% of all products. They do not include guard bands and are not warranted. Typical specifications that are not in parenthesis are not tested and not warranted. They are generally representative of the nominal characteristic performance.
Uncertainty	A coverage factor of $k = 2$ is applied to the measurement uncertainties to facilitate comparison with other industry monitors. All specifications subject to change without notice. For the most current data sheet, please visit the Anritsu web site: <a href="http://www.anritsu.com">www.anritsu.com</a>

 **Cable and Antenna Analyzer**

**Measurements**

Measurements	VSWR Return Loss Cable Loss (One Port) Distance-to-Fault (DTF) Return Loss Distance-to-Fault (DTF) VSWR Smith Chart 50 Ω/ 75 Ω (Advanced Mode Only) 1-Port Phase (Advanced Mode Only) Transmission with External Sensor (Advanced Mode Only)
--------------	---

**Setup Parameters–Classic Mode**

Measurement Display	Single Display with independent markers
Frequency	F1/F2
DTF	D1/D2, DTF Aid, Cable Loss, Propagation Velocity, Cable type
Windowing	Rectangular, Normal Side Lobe, Low Side Lobe, Minimum Side Lobe
Amplitude	Top, Bottom Auto Scale, Full Scale
Sweep	Data Points, Run/Hold, Single/Continuous, RF Immunity (High/Low), RF Power in Hold (On/Off), Trace
Data Points	130, 259, 517, 1033, 2065
Markers	Markers 1 to 6 (On/Off), Delta Markers 2 to 4 (Ref M1), Marker to Peak/Valley, Marker Table, Marker 5 (Peak/Valley between M1 & M2), Marker 6 (Peak/Valley between M3 & M4), Independent Markers for Frequency and Distance Measurements
Traces	Copy Trace To Memory, Trace Display, Trace Math [Trace - Memory, Trace + Memory, (Trace + Memory)/2]
Limit Line	On/Off, Edit Value, Limit Alarm, Pass/Fail On/Off, Limit Preset
Calibration	Start Calibration, Cal Info, Cal Correction (On/Off), Cal Method (OSL, InstaCal™), Cal Type (Standard, FlexCal™)
Save/Recall	Setups, Measurements, Screen Shots

**Setup Parameters–Advanced Mode**

Measurement Display	Single/Dual Display with independent markers
Frequency	Start Frequency (F1), Stop Frequency (F2)
DTF	Start Distance (D1), Stop Distance (D2), Units m/ft, DTF Aid, Cable List, Cable Loss, Propagation Velocity
Windowing	Rectangular, Normal Side Lobe, Low Side Lobe, Minimum Side Lobe
Amplitude	Top, Bottom, Auto Scale, Full Scale
Sweep	Data Points, Run/Hold, Single/Continuous, RF Immunity (High/Low), RF Power in Hold (On/Off)
Data Points	130, 259, 517, 1033, 2065
Markers	Markers 1 to 8 (On/Off), Delta Markers 2 to 8 (Ref M1), Marker Tracking (On/Off), Marker to Peak/Valley, Marker Table, Marker 5 & 7 (Peak/Valley between M1 & M2), Marker 6 & 8 (Peak/Valley between M3 & M4), Independent Markers for Frequency and Distance Measurements
Traces	Copy Trace to Memory, Trace Display, Trace Math [Trace - Memory, Trace + Memory, (Trace + Memory)/2]
Limit Line	Active Limit (Upper/Lower), Limit State (On/Off), Move Active Limit, Edit Segments (42 upper and 42 lower segments maximum), Limit Alarm, Pass/Fail On/Off, Limit Preset
Calibration	Start Calibration, Cal Info, Cal Correction (On/Off), Cal Method (OSL, InstaCal™, Transmission, OSL + Transmission), Cal Type (Standard, FlexCal™)
Save/Recall	Setups, Measurements, Screenshots

**Frequency**

Frequency Range	2 MHz to 4 GHz
Frequency Accuracy	± 5 ppm @ 23 °C ± 3 °C
Frequency Resolution	1 kHz

**Power**

Output Power	-3 dBm, typical
--------------	-----------------

**Interference Immunity**

On-Channel	+17 dBm outside calibrated sweep range
On-Frequency	+13 dBm within calibrated sweep range

**Measurement Speed**


Return Loss	≤ 1.50 ms/data point, RF immunity low, typical
Distance-to-Fault	≤ 1.75 ms/data point, RF immunity low, typical

**Return Loss**

Measurement Range	0 to 60 dB
Resolution	0.01 dB

**VSWR**

Measurement Range	1 to 65
Resolution	0.01

 **Cable and Antenna Analyzer** (continued)

**Cable Loss**

Measurement Range	0 to 30 dB
Resolution	0.01 dB

**Distance-to-Fault**

Vertical Range Return Loss	0 to 60 dB
Vertical Range VSWR	1 to 65
Fault Resolution (meters)	$(1.5 \times 10^8 \times v_p) / \Delta F$ ( $v_p$ = propagation velocity, $\Delta F$ is $F_2 - F_1$ in Hz)
Horizontal Range (meters)	0 to (Data Points - 1) x Fault Resolution, to maximum of 1500 meters (4921 ft)

**1-Port Phase** (Advanced Mode Only)

Measurement Display Range	-450 ° to +450 °
Resolution	0.01 °

**Smith Chart** (Advanced Mode Only)

Impedance	50 Ω, 75 Ω
Resolution	0.01

**Transmission Ext Sensor** (Advanced Mode Only)


Measurement Display Range	-100 dB to +100 dB
Resolution	0.01 dB

**Measurement Accuracy** (at 23 °C ± 3 °C)


Corrected Directivity	≥ 38 dB, InstaCal™ calibration
	≥ 42 dB, OSL calibration (OSLN50A-8, OSLNF50A-8, OSLN50-1, OSLNF50-1)

**Return Loss Measurement Uncertainty** (Standard OSL calibration. OSLN50-1 Precision Open/Short/Load calibration component.)

**Magnitude Uncertainty**

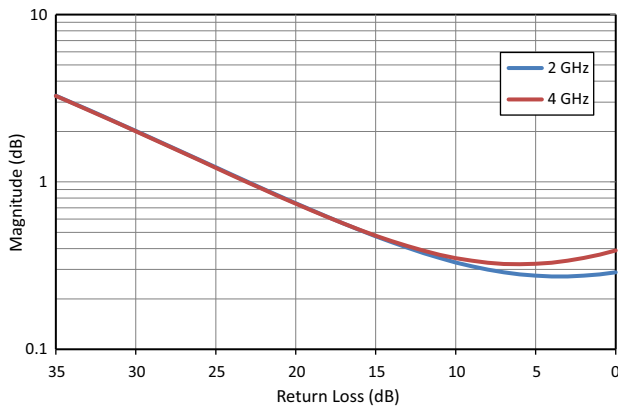

**Phase Uncertainty**

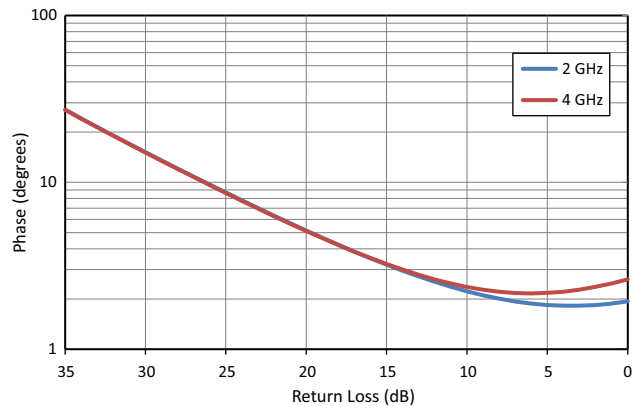



**Internal Power Meter**

Frequency	Measurement Frequency (for Cal Factor)
Amplitude	Max Value, Min Value, Offset Value, Relative On/Off, Units dBm/Watts, Auto Scale, Fullscale
Calibration	Zero On/Off
Average	Running Average, Max Hold (On/Off), Run/Hold, Average Mode (Continuous/Single)
Limits	Limit (On/Off), Upper Value, Lower Value
Frequency Range	50 MHz to 4 GHz
Display Range	-100 dBm to +100 dBm
Offset Range	Max ± 100 dB, user settable value
Measurement Range	-33 dBm to +20 dBm
VSWR	1.5:1 typical
Maximum Power	+27 dBm, ± 45 VDC (damage level)
Connector	Type N(m), 50 Ω
Accuracy	± 0.7 dB (0 dBm, 1 GHz CW, @ 23 °C ± 3 °C)
Frequency Response and Linearity	Additional ± 0.8 dB (± 0.5 dB typical)
Temperature Effect	Additional ± 0.02 dB per 1 °C change (typical)



**High Accuracy Power Meter** (requires external USB Power Sensor)

Amplitude	Maximum, Minimum, Offset, Relative On/Off, Units, Auto Scale				
Average	# of Running Averages, Max Hold				
Zero/Cal	Zero On/Off, Cal Factor (Center Frequency, Signal Standard)				
Limits	Limit On/Off, Limit Upper/Lower				
Power Sensor Model	MA24105A	MA24106A	MA24108A/18A/26A	MA24208A/18A	MA24330A/40A/50A
Description	Inline High Power Sensor	High Accuracy RF Power Sensor	Microwave USB Power Sensor	Microwave Universal USB Power Sensor	Microwave CW USB Power Sensor
Frequency Range	350 MHz to 4 GHz	50 MHz to 6 GHz	10 MHz to 8/18/26 GHz	10 MHz to 8/18 GHz	10 MHz to 33/40/50 GHz
Connector	Type N(f), 50 Ω	Type N(m), 50 Ω	Type N(m), 50 Ω (8/18 GHz) Type K(m), 50 Ω (26 GHz)	Type N(m), 50 Ω	Type K(m), 50 Ω (33/40 GHz) Type V(m), 50 Ω (50 GHz)
Dynamic Range	+3 dBm to +51.76 dBm (2 mW to 150 W)	-40 dBm to +23 dBm (0.1 µW to 200 mW)	-40 dBm to +20 dBm (0.1 µW to 100 mW)	-60 dBm to +20 dBm (1 nW to 100 mW)	-70 dBm to +20 dBm (0.1 nW to 100 mW)
Measurand	True-RMS	True-RMS	True-RMS, Slot Power, Burst Average Power	True-RMS, Slot Power, Burst Average Power	Average Power
Measurement Uncertainty	± 0.17 dB <sup>a</sup>	± 0.16 dB <sup>b</sup>	± 0.18 dB <sup>c</sup>	± 0.17 dB <sup>d</sup>	± 0.17 dB <sup>e</sup>
Data sheet (for complete specifications)	11410-00621	11410-00424	11410-00504	11410-00841	11410-00906

- Notes:
- a. Expanded uncertainty with K=2 for power measurements of a CW signal greater than +20 dBm with a matched load. Measurement results referenced to the input side of the sensor.
  - b. Total RSS measurement uncertainty (0 °C to 50 °C) for power measurements of a CW signal greater than -20 dBm with zero mismatch errors.
  - c. Expanded uncertainty with K=2 for power measurements of a CW signal greater than -20 dBm with zero mismatch errors.
  - d. Power uncertainty expressed with two sigma confidence level for CW measurement after zero operation. Includes calibration factor and linearity over temperature uncertainties, but not the effects of mismatch, zero set and drift, or noise.
  - e. Includes linearity over temperature uncertainties, but not the effects of calibration factor, mismatch, zero set and drift, and noise.

**Video Inspection Probe** (Requires external USB Video Inspection Probe, sold separately)

**Setup Parameters**

Probe Models	G0306A or G0306B 400X USB Visual Inspection Probe
Tip Type (included with G0306A)	SC_APC_F, SC_PC_F, LC_PC_F, FC_PC_F, 2.5APC_M, 2.5PC_M, 1.25PC_M:
Test Profile (IEC 61300-3-35)	SM PC >45, SM APC, SM PC >25, MM PC 62.5, MM PC 50.0:
Auto Analyze	On/Off
Auto Filename	On/Off
Auto Filename Settings	Location, File Prefix, Start Number, Include Date

**Measurement Parameters**

Live	View Live Image
Captured	Capture Image for Analysis
Analyze	Analyze Image
Results Table	Auto/Off
Overlay	On/Off
Zoom Control Help	Displays instruction for image Zoom feature


**Save/Recall Parameters**

Save	Measurement (*.vpi), VIP Image (*.png), Screen Shot (.png)
Recall	Measurement (*.vpi), VIP Image (*.png), Screen Shot (.png)
File Management	Rename, Create Folder, Copy, Paste, Delete


**Report Parameters**

Header Settings	Customer, Project, Operator, Notes, Include Logo
Generate Report	Generates pdf report with options to include multiple *.vpi files

**Instrument Displays**

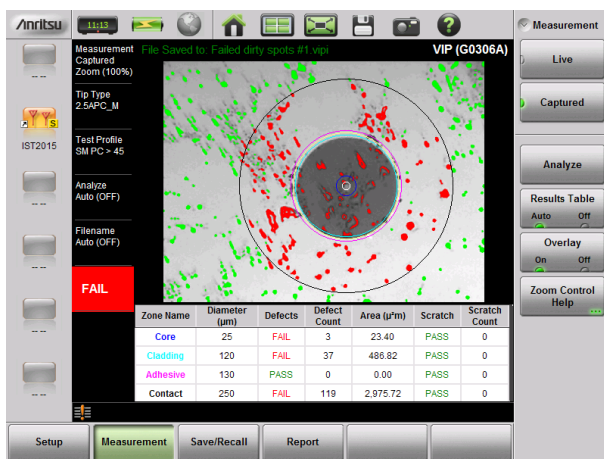

Dirty, oily fiber fails inspection

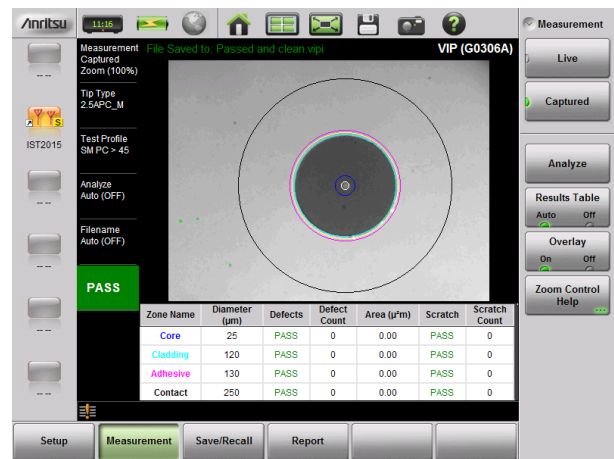

After proper cleaning, fiber passes 100%

 **General Specifications**

**Setup Parameters**

System Info	Status, Battery
System Setups	Date/Time, Language, Display/Audio
Date/Time	Time and Date Settings, Time Zone Settings
Language	English, French, German, Italian, Spanish, Russian, Portuguese, Japanese, Korean, Chinese
Display/Audio	Brightness, Color Schemes, Screen Shot Settings, Volume
Connectivity	GPS, Ethernet Configuration (DHCP/Static)
Diagnostics	Self Test
Preset	Preset, Reset, Update Firmware
Reset	Factory Reset, Delete All User Files, Delete Custom Files, Master Reset
File	Save, Recall, File Management
Save	Measurement (*.dat), Setup (*.stp), Screen Shot (*.png)
Recall	Recall, Create Folder, Copy, Paste, Delete
File Management	Rename, Create Folder, Copy, Paste, Delete
Navigation	Top, Bottom, Page Up, Page Down
Help Menu	System Info, FAQ, User Guide
Internal Trace/Setup Memory	> 1000 files (files may be traces, setups, screen shots, or any combination)
External Trace/Setup Memory	Limited only by size of USB Flash drive

**Connectors**

RF Out/Reflect In	Type N, female, 50 Ω, Maximum Input +42 dBm, ± 50 VDC
InstaCal™/Power Meter	Type N, male, 50 Ω, Maximum Input +27 dBm, ± 45 VDC (Damage Level)
External Power	5.5 mm barrel connector, 11 to 14 VDC, < 3.0 A
USB Ports	USB 2.0 Type A (two ports)
USB Interface	Type mini-B, Connect to PC for data transfer

**Display**

Type	TFT Resistive Touch Screen
Size	7.0 in daylight viewable color LCD
Resolution	800 x 480
Pixel Defects	No more than five defective pixels (99.9986% good pixels)

**GPS Connectivity** (external GPS USB module sold separately)

GPS Time/Location Indicator	Time, Latitude, Longitude and Altitude in GPS dialog (current or last known location) Time, Latitude, Longitude and Altitude with trace storage (current or last known location)
Setup	Clear Data, Synchronize system time to GPS

**Battery**

Type	Li-Ion
Battery Operation	> 8.0 Hours typical (70 % brightness setting, continuous usage)
Standby	7 days typical (With fully charged battery. Actual time will vary depending on battery charge level)

**Regulatory Compliance**

European Union	EMC 2014/30/EU, EN 61326:2013, CISPR 11/EN 55011, IEC/EN 61000-4-2/3/4/5/6/8/11 Low Voltage Directive 2014/35/EU Safety EN 61010-1:2010 RoHS Directive 2011/65/EU applies to instruments with CE marking placed on the market after July 22, 2017
United Kingdom	EMC SI 2016/1091; BS EN 55011 & BS EN 61000-4-2/3/4/5/6/8/11 Consumer Protection (Safety) SI 2016/1101; BS EN 61010-1:2010 Environmental Protection SI 2012/3032; 2011/65/EU & 2015/863
Australia and New Zealand	RCM AS/NZS 4417:2012
Canada	ICES-1(A)/NMB-1(A)
South Korea	KCC-REM-A21-0004

**Environmental**

	MIL-PRF-28800F Class 2
Operating Temperature Range	-10 °C to 55 °C
Storage Temperature Range	-51 °C to 71 °C
Maximum Relative Humidity	95 % RH at 30 °C, non-condensing
Vibration, Sinusoidal	5 Hz to 55 Hz
Vibration, Random	10 Hz to 500 Hz
Half Sine Shock	30 g <sub>n</sub>
Altitude	4600 meters, operating and non-operating
Explosive Atmosphere	MIL-PRF-28800F Section 4.5.6.3 MIL-STD-810G, Method 511.5, Procedure 1

**Size and Weight**

Size	250 mm x 177 mm x 61 mm (10.0 in x 7.1 in x 2.4 in)
Weight	< 2.0 kg (4.4 lb), including battery

**Warranty**

Duration	Standard three-year warranty (battery one-year warranty)
----------	--

 **Anritsu Tool Box and Line Sweep Tools** (for your PC)

Line Sweep Tools (LST) is a free PC based program that increases productivity for people who deal with numerous Cable and Antenna traces every day. LST is the next generation of Anritsu's familiar Handheld Software Tools (HHST) and shares its uncomplicated user interface, giving a new face to the term "ease of use."

Cable Editor <sup>1</sup>	Instrument Cable Lists may be retrieved from the instrument, modified as required, and uploaded back into instrument.
Distance to Fault <sup>2</sup> (DTF)	Easily convert Return Loss or VSWR traces to Distance to Fault traces with one button press.
Measurement Calculator	Provides quick conversion between commonly used measurement units such as VSWR, RL, and others.
Signal Standard Editor <sup>1</sup>	Signal Standard Lists may be retrieved from the instrument, modified as required, and uploaded back into instrument.
Naming Grid	A naming grid function makes changing file names, trace titles, and trace subtitles from field values to those required by contract simple and quick. Once the naming grid is populated with user defined file name segments, a few simple button presses will then fill out the file, title, and sub-title names. Quickly applied to multiple traces, the naming grid can save time, increase efficiency and accuracy.
Presets	Presets make applying markers and a limit line to similar traces quick and easy. They only need to be set once, and recorded. After this, applying them to a similar trace requires only one button push. This speeds up trace processing and makes providing consistent marker and limit line settings easy.
Report Generator	The report generator creates a professional PDF or HTML based report. Reports may include GPS <sup>3</sup> location, power level <sup>3</sup> , company logo <sup>4</sup> , instrument and calibration status along with a display of all open traces. It also may contain additional information such as addresses and phone numbers.
Capture	Plots to Screen, Database, *.dat, *.jpg
Connect	To PC using USB, Ethernet, Serial
Download/Upload <sup>1</sup>	Lists/measurements and live traces to PC for storage and analysis.
Supported File Types	Input: *.dat, *.vna, *.mna, *.pim, *.tm Output: *.dat, *.vna, *.pim, *.tm, *.csv, *.bmp, *.jpg, *.png

 **easyTest Tools** (for your PC)

**Instrument Mode**

Cable & Antenna Analyzer Mode

**Commands**

Display Image	Allows putting a custom image on the instrument screen
Recall Setup	Places the instrument into a known state
Prompt	Displays instructional messages on the instrument screen
Save	Allows automatic or manual saving of traces

**Connectivity**

Connections	USB cable or USB memory stick
-------------	-------------------------------

1. Instrument type/model must match original  
 2. Only \*.dat and \*.vna file types supported  
 3. Model dependent  
 4. Optionally set by user

Ordering Information



**Model Number**  
S331L  
(Includes all items listed in the description)

**Description**  
Cable and Antenna Analyzer - 2 MHz to 4 GHz  
Internal InstaCal™ - 2 MHz to 4 GHz  
Internal Power Meter - 50 MHz to 4 GHz  
High Accuracy Power Meter  
(requires External USB Power Sensor, sold separately)  
GPS Location/System Time Sync  
(requires External GPS Module 2000-1723-R, sold separately)  
Optical connector inspection with IEC 61300-3-35 based  
Pass/Fail standard  
(requires USB Video Inspection Probe, sold separately)







Calibration and Extended Warranty Options

Warranty	Warranty with Z540 Calibration	Description
S331L-ES510	S331L-ES513	Warranty Extension to 5 Years, Return to Anritsu

Calibration Only Options




Option	Description
S331L-0098	Standard Calibration to ISO17025 and ANSI/NCSL Z540-1. Includes calibration certificate.
S331L-0099	Premium Calibration to ISO17025 and ANSI/NCSL Z540-1. Includes calibration certificate, test report, and uncertainty data.

Standard Accessories (included with instrument)

Accessory	Description	Accessory	Description
	2000-1676-R Soft Carrying Case		2000-1687-R Torque Multiplier N(m)
	2000-1691-R Stylus with Coiled Tether		3-2000-1498 USB A/5-pin mini-B Cable, 10 ft
	Certificate of Calibration and Conformance		806-141-R Automotive Power Adapter, 12 VDC, 60 W
	40-187-R AC-DC Adapter with AC power cord (country dependent)		


**USB Power Sensors** (for complete ordering information, see the respective data sheets of each sensor)


Accessory	Description
	MA24330A Microwave CW USB Power Sensor, 10 MHz to 33 GHz, +20 dBm
	MA24340A Microwave CW USB Power Sensor, 10 MHz to 40 GHz, +20 dBm
	MA24350A Microwave CW USB Power Sensor, 10 MHz to 50 GHz, +20 dBm
	MA24208A Microwave Universal USB Power Sensor, 10 MHz to 8 GHz, +20 dBm to -60 dBm
	MA24218A Microwave Universal USB Power Sensor, 10 MHz to 18 GHz, +20 dBm to -60 dBm
	MA24106A High Accuracy RF Power Sensor, 50 MHz to 6 GHz, +23 dBm to -40 dBm
	SC8268 USB Transmission Sensor, K(m), 1 MHz to 40 GHz, +10 dBm to -50 dBm

Accessory	Description
	MA24108A Microwave USB Power Sensor, 10 MHz to 8 GHz, +20 dBm to -40 dBm
	MA24118A Microwave USB Power Sensor, 10 MHz to 18 GHz, +20 dBm to -40 dBm
	MA24126A Microwave USB Power Sensor, 10 MHz to 26 GHz, +20 dBm to -40 dBm
	MA24105A Inline Dual Directional High Power Sensor, 350 MHz to 4 GHz, +3 dBm to +51.76 dBm
	MA25100A RF Power Indicator



**Optional Accessories**



**Backpack and Transit Case**

Accessory	Description
	67135 Anritsu Backpack (for Handheld Instrument and PC)

Accessory	Description
	760-286-R Compact Transit Case with Wheels and Handle 55.6 cm x 35.5 cm x 22.9 cm (21.89" x 13.98" x 9.01")

**USB Extender Kit** (for use with external 2-port cable loss/transmission sensors; requires Cat 5e extension cable, sold separately)

Accessory	Description
	2000-1900-R USB 2.0 Active 100 meter Extender (with Type A power cord for USA, Japan, North America, Central America and Caribbean)
	2000-1901-R USB 2.0 Active 100 meter Extender (with Type C power cord for use in Europe, India, South Korea, and many countries in Middle East and Africa)
	2000-1902-R USB 2.0 Active 100 meter Extender (with Type I power cord for use in Australia, New Zealand, Argentina, and the South Pacific)
	2000-1903-R USB 2.0 Active 100 meter Extender (with Type G power cord for use in the UK, and several other countries in Asia, the Middle East, and Africa)

Accessory	Description
	2000-1717-R USB 1.1 Passive 40 m Extender (Not compatible with sensors MA24208A, MA24218A, MA24330A, MA24340A, MA24350A; must use active extenders with these sensors.)
	2100-28-R Cat 5e extension cable for use with USB Extender (22.5 m)

**GPS Module**

Accessory	Description
-----------	-------------



2000-1723-R	High Performance USB Mag-Mount GPS Module
-------------	---

**Ethernet Adapter**

Accessory	Description
-----------	-------------



2000-1810-R	Portable USB to Ethernet LAN Adapter
-------------	--------------------------------------

**Video Inspection Probe**

Accessory	Description
-----------	-------------



971-14-R	Ferrule Cleaner, 2.5 mm SC
----------	----------------------------

971-15-R	Ferrule Cleaner, 1.25 mm LC
----------	-----------------------------



971-16-R	Fiber Ferrule Cleaner
----------	-----------------------


Accessory	Description
-----------	-------------




G0306B	Video Inspection Probe (400x), including the following standard connector tips:
	Universal Tips:
	H0361A 1.25PC-M, H0360A 2.5PC-M, H0362A 2.5APC-M
	Bulkhead Tips:
	H0363A LC-PC-F, H0364A FC-PC-F, H0375A ST-PC-F, H0366A SC-APC-
	Additional Tips Available:
	H0372A E2000-PC-F, H0373A FC-APC-F, H0374A MU-PC-F, H0365A SC-PC-F, H0376A 1.25APC-M


**Phase-Stable Test Port Cables, Armored w/Reinforced Grip**

(recommended for cable & antenna line sweep applications)


Accessory	Description
	15RDN50-1.5-R 1.5 m, DC to 6 GHz, N(m) to 7/16 DIN(m), 50 Ω
	15RDFN50-1.5-R 1.5 m, DC to 6 GHz, N(m) to 7/16 DIN(f), 50 Ω
	15RDN50-3.0-R 3.0 m, DC to 6 GHz, N(m) to 7/16 DIN(m), 50 Ω
	15RDFN50-3.0-R 3.0 m, DC to 6 GHz, N(m) to 7/16 DIN(f), 50 Ω


Accessory	Description
	15RNFN50-1.5-R 1.5 m, DC to 6 GHz, N(m) to N(f), 50 Ω
	15RNFN50-3.0-R 3.0 m, DC to 6 GHz, N(m) to N(f), 50 Ω

**Interchangeable Adapter, Phase Stable Test Port Cables, Armored w/Reinforced Grip** (recommended for cable and antenna line sweep applications. It uses the same ruggedized grip as the Reinforced grip series cables. Now you can also change the adapter interface on the grip to four different connector types.)

Accessory	Description
	15RCN50-1.5-R 1.5 m, DC to 6 GHz, N(m), N(f), 7/16 DIN(m), 7/16 DIN(f), 50 Ω
	15RCN50-3.0-R 3.0 m, DC to 6 GHz, N(m), N(f), 7/16 DIN(m), 7/16 DIN(f), 50 Ω

**Phase-Stable Test Port Cables, Armored** (recommended for use with tightly spaced connectors and other general purpose applications)


Accessory	Description
	15NNF50-1.5C 1.5 m, DC to 6 GHz, N(m) to N(f), 50 Ω
	15NN50-1.5C 1.5 m, DC to 6 GHz, N(m) to N(m), 50 Ω
	15NNF50-3.0C 3.0 m, DC to 6 GHz, N(m) to N(f), 50 Ω
	15NN50-3.0C 3.0 m, DC to 6 GHz, N(m) to N(m), 50 Ω
	15NNF50-5.0C 5.0 m, DC to 6 GHz, N(m) to N(f), 50 Ω
	15NN50-5.0C 5.0 m, DC to 6 GHz, N(m) to N(m), 50 Ω

Accessory	Description
	15NDF50-1.5C 1.5 m, DC to 6 GHz, N(m) to 7/16 DIN(f), 50 Ω
	15ND50-1.5-R 1.5 m, DC to 6 GHz, N(m) to 7/16 DIN(m), 50 Ω
	15N43M50-1.5C Test Port Extension Cable, Armored, 1.5 m DC to 6 GHz, N(m) to 4.3-10(m)
	15N43F50-1.5C Test Port Extension Cable, Armored, 1.5 m, DC to 6 GHz, N(m) to 4.3-10(f)
	15N43M50-3.0C Test Port Extension Cable, Armored, 3 m, DC to 6 GHz, N(m) to 4.3-10(m)
	15N43F50-3.0C Test Port Extension Cable, Armored, 3 m, DC to 6 GHz, N(m) to 4.3-10(f)

**Coaxial Calibration Components, 50 Ω**

Accessory	Description
	22NF50 Open/Short, N(f), DC to 18 GHz, 50 Ω
	OSLNF50A-8 High Performance Type N(f), DC to 8 GHz, 50 Ω
	2000-1915-R Precision Open/Short/Load, 4.3-10(m), DC to 6 GHz, 50 Ω
	2000-1619-R Precision Open/Short/Load, 7/16 DIN(f), DC to 6.0 GHz 50 Ω
	SM/PLNF-1 Precision Load, N(f), 4 dB, 6.0 GHz, 50 Ω


**Coaxial Calibration Components, 75 Ω**

Accessory	Description
	22N75 Open/Short, N(m), DC to 3 GHz, 75 Ω

**Accessory Description**

	OSLN50A-8 High Performance Type N(m), DC to 8 GHz, 50 Ω
	2000-1914-R Precision Open/Short/Load, 4.3-10(f), DC to 6 GHz, 50 Ω
	2000-1618-R Precision Open/Short/Load, 7/16 DIN(m), DC to 6.0 GHz, 50 Ω
	22N50 Open/Short, N(m), DC to 18 GHz, 50 Ω
	SM/PL-1 Precision Load, N(m), 4 dB, 6.0 GHz, 50 Ω

**Accessory Description**

	22NF75 Open/Short, N(f), DC to 3 GHz, 75 Ω
---	---

**Adapters**  
Accessory      Description



1091-26-R  
SMA(m) to N(m), DC to 18 GHz, 50 Ω



1091-27-R  
SMA(f) to N(m), DC to 18 GHz, 50 Ω



1091-80-R  
SMA(m) to N(f), DC to 18 GHz, 50 Ω



1091-81-R  
SMA(f) to N(f), DC to 18 GHz, 50 Ω



1091-172-R  
BNC(f) to N(m), DC to 1.3 GHz, 50 Ω

1091-442-R  
Low PIM Adapter, 4.3-10(f) to N(m), DC to 6.0 GHz, 50 Ω



1091-443-R  
Low PIM Adapter, 4.3-10(m) to N(m), DC to 6.0 GHz, 50 Ω



1091-434-R  
Low PIM Adapter, 4.1-9.5(m) to 7/16 DIN(f), DC to 3.0 GHz, 50 Ω



1091-465-R  
Adapter, DC to 6 GHz, 4.3-10(f) to N(f), 50 Ω



1091-440-R  
Low PIM Adapter, 4.3-10(f) to 7/16 DIN(f), DC to 6.0 GHz, 50 Ω

**Accessory**      Description



510-102-R  
N(m) to N(m), DC to 11 GHz, 50 Ω, 90 degrees right angle



510-90-R  
7/16 DIN(f) to N(m), DC to 7.5 GHz, 50 Ω



510-91-R  
7/16 DIN(f) to N(f), DC to 7.5 GHz, 50 Ω



510-92-R  
7/16 DIN(m) to N(m), DC to 7.5 GHz, 50 Ω



510-93-R  
7/16 DIN(m) to N(f), DC to 7.5 GHz, 50 Ω



510-96-R  
7/16 DIN(m) to 7/16 DIN(m), DC to 7.5 GHz, 50 Ω



510-97-R  
7/16 DIN(f) to 7/16 DIN(f), DC to 7.5 GHz, 50 Ω



1091-433-R  
Low PIM Adapter, 4.1/9.5(f) to 7/16 DIN(f), DC to 3.0 GHz, 50 Ω



1091-467-R  
Adapter, DC to 6 GHz, 4.3-10(m) to N(f), 50 Ω



1091-441-R  
Low PIM Adapter, 4.3-10(m) to 7/16 DIN(f), DC to 6.0 GHz, 50 Ω

**Precision Adapters**  
Accessory      Description










34NN50A  
N(m) to N(m), DC to 18 GHz, 50 Ω

**Accessory**      Description



34NFN50  
N(f) to N(f), DC to 18 GHz, 50 Ω

Attenuators		Accessory	
Accessory	Description	Accessory	Description
	1010-128-R 40 dB, 150 W, DC to 3 GHz, N(m) to N(f)		42N50-20 20 dB, 5 W, DC to 18 GHz, N(m) to N(f)
	3-1010-122 20 dB, 5 W, DC to 12.4 GHz, N(m) to N(f)		42N50A-30 30 dB, 50 W, DC to 18 GHz, N(m) to N(f)
	3-1010-123 30 dB, 50 W, DC to 8.5 GHz, N(m) to N(f)		1010-127-R 30 dB, 150 W, DC to 3 GHz, N(m) to N(f)
	3-1010-124 40 dB, 100 W, DC to 8.5 GHz, N(f) to N(m), Uni-directional		

**Documentation** (available at [www.anritsu.com](http://www.anritsu.com))

Part Number	Description
10100-00065	Product Information, Compliance, and Safety
11410-00616	Site Master™ S331L Technical Data Sheet
10580-00321	Site Master™ S331L User Guide
11410-00640	Site Master S331L Product Brochure (Includes information about additional Site Master models)
11410-00662	Site Master S331L Quick Fact Sheet
11410-00674	Cable and Antenna Analysis Troubleshooting Guide
10580-00253	Site Master™ S331L Maintenance Manual

## Training at Anritsu

Anritsu has designed courses to help you stay up to date with technologies important to your job. For available training courses, visit: [www.anritsu.com/training](http://www.anritsu.com/training) and search for training and education.



### • United States

#### **Anritsu Americas Sales Company**

490 Jarvis Drive, Morgan Hill, CA 95037-2809, U.S.A.  
Phone: +1-800-Anritsu (1-800-267-4878)

### • Canada

#### **Anritsu Electronics Ltd.**

#### **Americas Sales and Support**

490 Jarvis Drive, Morgan Hill, CA 95037-2809, U.S.A.  
Phone: +1-800-Anritsu (1-800-267-4878)

### • Brazil

#### **Anritsu Eletronica Ltda.**

Praça Amadeu Amaral, 27 - 1 Andar  
01327-010 - Bela Vista - Sao Paulo - SP, Brazil  
Phone: +55-11-3283-2511  
Fax: +55-11-3288-6940

### • Mexico

#### **Anritsu Company, S.A. de C.V.**

Blvd Miguel de Cervantes Saavedra #169 Piso 1,  
Col. Granada, Mexico, Ciudad de Mexico,  
11520, MEXICO  
Phone: +52-55-4169-7104

### • United Kingdom

#### **Anritsu EMEA Limited**

900 Capability Green,  
Luton, Bedfordshire, LU1 3LU, U.K.  
Phone: +44-1582-433200  
Fax: +44-1582-731303

### • France

#### **Anritsu SA**

12 avenue du Québec, Immeuble Goyave,  
91140 VILLEBON SUR YVETTE, France  
Phone: +33-1-60-92-15-50

### • Germany

#### **Anritsu GmbH**

Nemetschek Haus, Konrad-Zuse-Platz 1,  
81829 München, Germany  
Phone: +49-89-442308-0  
Fax: +49-89-442308-55

### • Italy

#### **Anritsu S.R.L.**

Spaces Eur Arte, Viale dell'Arte 25, 00144 Roma, Italy  
Phone: +39-6-509-9711

List Revision Date: 20250812

### • Sweden

#### **Anritsu AB**

Kistagången 20 B, 2 tr, 164 40 Kista, Sweden  
Phone: +46-8-534-707-00

### • Finland

#### **Anritsu AB**

Technopolis Aviapolis, Teknobulevardi 3-5 (D208.5),  
FI-01530 Vantaa, Finland  
Phone: +358-20-741-8100

### • Denmark

#### **Anritsu A/S**

c/o Regus Winghouse, Ørestads Boulevard 73, 4th  
floor,  
2300 Copenhagen S, Denmark  
Phone: +45-7211-2200

### • Spain

#### **Anritsu EMEA Ltd.**

#### **Representation Office in Spain**

Calle Manzanares 4, Primera planta, 28005  
Madrid, Spain  
Phone: +34-91-572-6761

### • Austria

#### **Anritsu Pty Ltd**

Am Belvedere 10, A-1100 Vienna, Austria  
Phone: +43-(0)1-717-28-710

### • United Arab Emirates

#### **Anritsu EMEA Ltd.**

#### **Anritsu A/S**

Office No. 164, Building 17, Dubai Internet City  
P. O. Box - 501901, Dubai, United Arab Emirates  
Phone: +971-4-3758479

### • India

#### **ANRITSU INDIA PRIVATE LIMITED**

6th Floor, Indiqube ETA, No.38/4, Adjacent to EMC2,  
Doddanekundi, Outer Ring Road,  
Bengaluru - 560048, India  
Phone: +91-80-6728-1300  
Fax: +91-80-6728-1301

### • Singapore

#### **ANRITSU PTE LTD**

1 Jalan Kilang Timor, #07-04/06 Pacific Tech Centre  
Singapore 159303  
Phone: +65-6282-2400  
Fax: +65-6282-2533

### • Vietnam

#### **ANRITSU COMPANY LIMITED**

16th Floor, Peakview Tower, 36 Hoang Cau Street,  
O Cho Dua Ward, Dong Da District, Hanoi, Vietnam  
Phone: +84-24-3201-2730  
Fax: +84-24-3201-2740

### • P.R. China (Shanghai)

#### **Anritsu (China) Co., Ltd.**

Room 2701-2705, Tower A, New Caohejing  
International Business Center No. 391 Gui Ping Road  
Shanghai, 200233, P.R. China  
Phone: +86-21-6237-0898  
Fax: +86-21-6237-0899

### • P.R. China (Hong Kong)

#### **ANRITSU COMPANY LIMITED**

Unit 1302, 13<sup>th</sup> Floor, New East Ocean Center,  
No.9 Science Museum Road, TsimShaTsui East,  
Kowloon, Hong Kong  
Phone: +852-2301-4980  
Fax: +852-2301-3545

### • Japan

#### **Anritsu Corporation**

8-5, Tamura-cho, Atsugi-shi, Kanagawa, 243-0016  
Japan  
Phone: +81-46-296-6509  
Fax: +81-46-225-8352

### • South Korea

#### **Anritsu Corporation, Limited**

8F, A TOWER, 20, Gwacheondaero 7-gil, Gwacheon-si,  
Gyeonggi-do, 13840, Republic of Korea  
Phone: +82-2-6259-7300  
Fax: +82-2-6259-7301

### • Australia

#### **Anritsu Pty. Ltd.**

Unit 20, 21-35 Ricketts Road,  
Mount Waverley, Victoria 3149, Australia  
Phone: +61-3-9558-8177  
Fax: +61-3-9558-8255

### • Taiwan

#### **ANRITSU COMPANY, INC.**

7F, No. 316, Sec. 1, NeiHu Rd., Taipei 114, Taiwan  
Phone: +886-2-8751-1816  
Fax: +886-2-8751-1817